

# 6.2L RAPTOR **JET SERIES**

OPERATOR'S MANUAL



**RAPTOR**  
*Indmar*

**Indmar**  
MARINE ENGINES

## FUEL SYSTEMS

Boats manufactured for use in California for model year 2018 and after meet the California EVAP Emissions regulation for spark-ignition marine watercraft. Boats meeting this requirement will have the following label affixed near the helm.

### **WARNING**

Operating, servicing and maintaining a recreational marine vessel can expose you to chemicals including engine exhaust, carbon monoxide, phthalates and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, service your vessel in a well-ventilated area and wear gloves or wash your hands frequently when servicing this vessel. For more information go to: [www.P65warnings.ca.gov/marine](http://www.P65warnings.ca.gov/marine)

The fuel system in boats marketed in states other than California complies with U.S. EPA-mandated evaporative emission standards at time of manufacture using certified components.

## CALIFORNIA AIR RESOURCES BOARD (CARB)

Inboard powered boats sold in the state of California are equipped with special components and certified to meet stricter environmental standards and exhaust emissions. All boats sold in California since 2009 are required to meet Ultra-Low (three-star) or Super-Ultra-Low (four-star) emissions.

## EXHAUST EMISSIONS



Inboard marine engine powered boats meeting CARB's exhaust emission standards are required to display the three-star or four-star label on the outside of the hull above the waterline.

### **DANGER**

Carbon monoxide (CO) can cause brain damage or death. Engine and generator exhaust contains odorless and colorless carbon monoxide gas. Carbon monoxide will be around the back of the boat when engines or generators are running. Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness and lack of consciousness. Get fresh air if anyone shows signs of carbon monoxide poisoning. See Section 1 - Safety for information regarding carbon monoxide poisoning.

# WELCOME

Dear Indmar Marine Engine Owner:

Thank you for selecting a boat powered by an Indmar Marine engine. Indmar is proud to provide the power to the best boat companies in the business and we hope that pride shows in the quality of our products. In the unlikely event that you have a defect-related problem with your boat's engine or drive train, you can rest assured knowing it is backed by our industry-leading five-year warranty coverage on premium models.

Indmar continues our solid partnership with the Ford Motor Company that was initiated in 2013 with the 6.2L Ford based engines. All Indmar engines are fuel injected and equipped with catalytic converter exhaust systems to provide a cleaner and safer boating experience for you and your family.

See the full warranty statement in Appendix C of this manual for details and exclusions.

If you have any questions concerning your engine that are not covered in this manual, please feel welcome to contact Indmar Customer Service at (901) 353-9930 or visit our website, [www.indmar.com](http://www.indmar.com), and submit your question.

Thanks again for choosing an Indmar-powered boat. We wish you safe, trouble-free boating.

Sincerely,

Team Indmar

## **INDMAR MARINE ENGINES VALUE STATEMENT**

Indmar Marine Engines has a pedigree going back over 50 years in the inboard marine industry and a proud tradition of pointing the way forward. Today, this legendary brand delivers an inimitable mix of unrivaled performance, meticulous craftsmanship and groundbreaking innovations – charting a course for others to follow, yet leaving the competition behind.

## **INDMAR MARINE ENGINES COMPANY MISSION**

To produce the world's finest, most advanced and most dependable gasoline inboard marine engines at the best possible price, while respecting the needs of our employees, customers, vendors and the precious environment we share.

# CONTENTS

Introduction.....	V
Section 1 – Safety .....	1-1
Carbon Monoxide Gas .....	1-2
Fuel .....	1-4
Battery.....	1-5
Engine Oil.....	1-5
Cleaning Solvents .....	1-6
Entanglement.....	1-6
Environmental .....	1-6
Section 2 – General Information.....	2-1
Fuel System.....	2-1
Battery.....	2-6
“Service Required” or “Check Engine” Indicator .....	2-9
Engine Cooling.....	2-10
Aquatic Invasive Species (AIS) Prevention.....	2-11
Exhaust Hoses .....	2-14
Selecting an Impeller.....	2-14
Section 3 – Pre-Start Checks .....	3-1
Pre-Start Checks .....	3-1
Section 4 – First-Time Operation and Break-In .....	4-1
First-Time Operation .....	4-2
Break-In.....	4-4
Section 5 – Engine Starting Procedures.....	5-1
How to Start Your Engine .....	5-1
If Engine Does Not Start .....	5-4
Engine Restart .....	5-4
Section 6 – Normal Operation .....	6-1
Sensible Operation.....	6-1
Daily Routine .....	6-1
Operating the Controls .....	6-3
Unusual Vibration .....	6-5
Section 7 – Maintenance .....	7-1
General Service Notes.....	7-1
Engine Oil.....	7-5
Engine Flame Arrestor .....	7-10
Engine Cooling.....	7-11

Internal (Cooling System) Care .....	7-16
Fresh Water Cooling.....	7-16
Fuel System.....	7-16
Electrical System.....	7-18
Wiring .....	7-19
General Lubrication.....	7-21
Accessory Drive .....	7-22
Section 8 – Storage and Winter Lay-Up.....	8-1
General Preparation .....	8-2
Reactivating Engine After Extended Storage .....	8-6
Extended Storage.....	8-7
Section 9 – Troubleshooting .....	9-1
Appendix A – Maintenance Components and Fluids.....	A-1
Service Log .....	A-3
Appendix A – Engine Specifications .....	B-1
Appendix A – Indmar Limited Product Warranty .....	C-1

# INTRODUCTION


This manual will acquaint you with basic information needed to safely operate and maintain your Indmar engine. We suggest you and all other operators read the entire manual before using your boat.

We recommend you contact your Indmar dealer for all engine service. Certified Indmar Technicians are trained to service your Indmar engine and drive train. They have current specifications, parts and the special equipment needed to service your Indmar engine and drive train. To find your nearest Indmar dealer, please visit our website at [www.indmar.com](http://www.indmar.com) or call (901) 353-9930.

In the unlikely event that you experience a major drive train or engine failure, please be aware that the failure may not be covered by the Indmar Limited Warranty. Complete Indmar Limited Warranty Statement can be found online at [www.indmar.com](http://www.indmar.com).

Some failures may be covered under your boat owner's insurance policy. We strongly recommend you contact your insurance company immediately and advise them of the situation until the final determination for eligibility is made.

To ensure that the proper information is available, note the six-digit engine serial number. The serial number is stamped on the engine block. Refer to Figure 1.1 for locations. The serial number also appears on the emissions label on the valve cover of the engine and on several stick-on tags that are attached to major engine components.

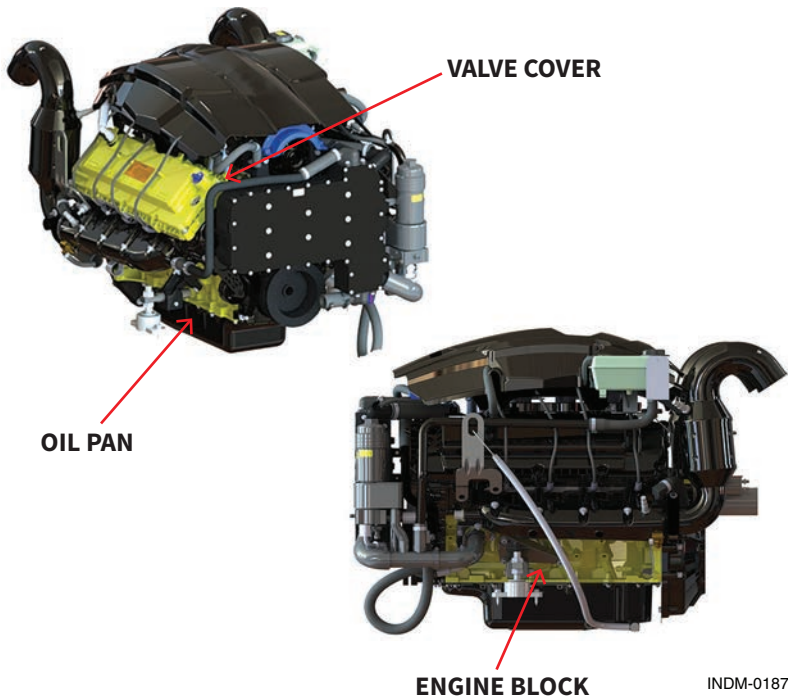

**FIGURE 1.1 | SERIAL NUMBER LOCATIONS**

## **WARRANTY REGISTRATION**

The Federal Boat Safety Act of 1971 requires registrations of marine products sold in the United States be maintained by the manufacturer and dealers of those products. Your dealer should have completed your warranty registration to comply with federal regulations. This registration enables us to contact you, if it should become necessary, to change or improve your product. The engine serial number is stamped into the block. For additional serial number locations, refer to Figure 1.1. Always retain a copy of the serial number for your personal records.

Warranty registration must be received within 10 days after date of purchase by the first owner. If your engine is not registered, all warranties will be void.



## **WARRANTY REGISTRATION TRANSFER**

The remainder of the engine warranty is transferable to a second owner. Warranty transfers must be completed within 10 days of the transfer of ownership.

If the trade-in and resale is handled by an authorized Indmar dealer, the dealer must fill out the warranty registration transfer form and send it and other paperwork specified along with the warranty transfer fee and the transfer will be processed on approval by Indmar.

If the sale of the boat is from a private owner to another individual, the engine package must be inspected, at the seller or purchaser's expense, and the Inspection Form, Warranty Transfer Form, specified paperwork and transfer fee and the transfer will be processed on approval by Indmar.

The new boat owner will be notified within 10 days of Indmar's receipt of the transfer form whether the transfer has been accepted or not. If the transfer has been accepted, the warranty expiration date will also be provided for the new owner.

To obtain enjoyment from your boat, follow recommendations described in this manual. The knowledge you gain through careful review will help you experience lasting satisfaction.

Further information regarding the care, operation, required equipment or specifications for your boat can be obtained from your local US Coast Guard Auxiliary, US Power Squadron, state boating authorities, or the American Red Cross. Know the law and your responsibilities as a boat owner.

Any alteration, change, improper maintenance or abnormal use by you which renders the engine or any of its components unreasonably dangerous will void all warranties and Indmar will not be liable for the resulting damages or injuries.

# EMISSION CONTROL WARRANTY INFORMATION


The inboard engine in your boat includes the Indmar Emission Control System identified as SFI. It is also equipped with heated oxygen sensors (HO2s), 2 catalytic converters (2 TWC) and an onboard diagnostic system (OBD). The fuel and ignition systems on your engine meet the stringent requirements set forth by the U.S. Environmental Protection Agency (EPA) and the California Air Resources Board (CARB). Indmar also uses propylene glycol anti-freeze in the closed cooling system of your engine to reduce the environmental impact in the event that anti-freeze is expelled from the engine.


Your Indmar manufactured engine has a special environmental label required by the California Air Resources Board (CARB). The label has 1, 2, 3 or 4 stars.


A hangtag, provided with your inboard engine, describes the meaning of the star system.


	<p><b>One Star-Low emission</b> The one-star label identifies engines that meet the Air Resources Board's Personal Watercraft and Outboard marine engine 2001 exhaust emission standards. Engines meeting these standards have 75% lower emissions than conventional carbureted two-stroke engines. These engines are equivalent to the U.S. EPA's 2006 standards for marine engines.</p>
	<p><b>Two Stars-Very Low emission</b> The two-star label identifies engines that meet the Air Resources Board's Personal Watercraft and Outboard marine engine 2004 exhaust emission standards. Engines meeting these standards have 20% lower emissions than One Star-Low Emission engines.</p>
	<p><b>Three Stars-Ultra Low emission</b> The three-star label identifies engines that meet the Air Resources Board's Personal Watercraft and Outboard marine engine 2008 exhaust emission standards or the Sterndrive and Inboard marine engine 2003-2008 exhaust emission standards. Engines meeting these standards have 65% lower emissions than One Star-Low Emission Engines.</p>
	<p><b>Four Stars-Super Ultra Low emission</b> The four-star label identifies engines that meet the Air resources Board's Sterndrive and Inboard marine engine 2009 exhaust emission standards. Personal Watercraft and Outboard marine engines may also comply with these standards. Engines meeting these standards have 90% lower emissions than One Star-Low Emission Engines.</p>
<p>Cleaner Watercraft - Get the Facts 1-800-END-SMOG • www.arb.ca.gov</p>	

**The Star Label means Cleaner Marine Engines**  
This engine has been certified as:









**The Symbol for Cleaner Marine Engines:**  
Cleaner Air and Water  
For a healthier lifestyle and environment.

**Better Fuel Economy**  
Burns up to 30-40 percent less gas and oil than conventional carbureted two-stroke engines, saving money and resources.

**Longer Emission Warranty**  
Protects consumer for worry free operation.

## OPERATING FUELS AND LUBRICANTS

In order to keep your engine operating efficiently and to maintain the Emission Control System the following requirements must be observed.

**Fuel** – Your engine was designed and certified to operate on the unleaded fuels listed below. Fuel ratings must be based on the (R+M)/2 method and meet the specifications ASTM D4814 in the US.

**NOTE:** *If the recommended fuel is not available, your engine may operate on regular unleaded gasoline with a minimum pump (R+M)/2 octane rating of 87. A noticeable reduction in performance, drivability and fuel economy will result. It is not recommended to operate under heavy usage with less than the recommended octane for your engine.*

*Poor quality, contaminated or old gasoline can cause symptoms such as poor drivability, hard starting, rough running or overall poor performance. If you experience these symptoms, first try fresh fuel from another station.*

*Indmar does not endorse or recommend the use of additives sold as “Octane Booster”, “Octane Enhancer” or any other product claiming to increase or restore the octane or quality of gasoline. These additives can contain chemicals that may alter the emissions of the engine or cause damage to the emissions components.*

If an engine fails and it is determined that the failure was due to improper fuel with too low of an octane rating, too much alcohol, water content greater than 1000 PPM or any combination of these conditions, the failure will not be covered by the Indmar Limited Warranty.

## APPROVED FUELS RAPTOR SERIES

6.2L MODEL	GASOLINE (PETRO) OCTANE	ETHANOL %				
		0%	10%	15%	30%	85%
400   440	Mid-Grade 89 Octane	✓	✓	X	X	X
460   575	Premium 91-93 Octane	✓	✓	X	X	X
ALL MODELS	Regular	X	X	X	X	X

**Lubricant** – Indmar uses and recommends a semi-synthetic 5W-30 engine oil meeting API rating SN or SP for use in all its 400 and 440 engines and fully synthetic 15W-50 oil meeting API rating SN or SP in its 460 and 575 engines.

**Additives** – Over time, oxidation of gasoline can form buildup of harmful solids called gums. Water and impurities in the fuel system can cause corrosion. To stabilize the fuel and prevent oxidation, gum buildup, and corrosion during maintenance or storage, add STA-BIL 360 Marine Fuel Treatment & Additive product to the fuel tank after fill-up.

Refer to Section 2, General Information, for more information.

## **EMISSION-RELATED WARRANTY REQUIREMENTS**

Your new engine is designed, built and equipped so it conforms at the time of sale to the ultimate purchaser with the requirements of EPA CFR 40, part 1045.120 and CARB Title 13, Division 3, Chapter 9, Article 4.7, 2445.1 and 2445.2. It is free from defects in materials and workmanship that may keep it from meeting these requirements.

The warranty period begins on the date the engine is delivered to an ultimate purchaser or first placed into service (e.g., a demonstration engine or watercraft). Does not apply in the State of California.

The emission-related warranty covers all components whose failure would increase an engine's emissions of any regulated pollutant, including components listed in the following section and components from any other system developed to control emissions.

## **EMISSIONS COMPONENTS WARRANTY**

The following components are considered as part of the emissions control system and are covered under the Emissions Control Warranty.

1. Fuel Metering System
  - A. Fuel injectors
  - B. Fuel pressure regulator
  - C. Manifold Absolute Pressure Sensor
  - D. Throttle Position Sensor
  - E. Idle Air Control Valve
  - F. Throttle Body – Port Fuel Injection Models
  - G. Throttle Body Assembly – Throttle Body Fuel Injection Models
  - H. Coolant Temperature Sensor
  - I. Intake Valves
  - J. Oxygen Sensors
2. Air Induction System
  - A. Intake Manifold
  - B. Air Filter (Flame Arrestor)
  - C. Supercharger
  - D. Turbocharger
3. Ignition System
  - A. Spark Plugs
  - B. Electronic Ignition System

- C. Ignition coil and/or control module
- D. Ignition Wires
- 4. Lubrication System
  - A. Oil pump and internal parts
- 5. Positive Crankcase Ventilation (PCV) System
  - A. PCV valve
  - B. Oil Filler Cap
- 6. Exhaust System
  - A. Exhaust manifold(s)
  - B. Exhaust riser(s)
  - C. Exhaust valves
  - D. Catalytic Converters
- 7. Miscellaneous Items Used on Above Systems
  - A. Hoses, clamps, fittings, tubing, sealing gaskets or devices and mounting hardware
  - B. Electronic Controls
  - C. Electronic Control Module
  - D. Onboard diagnostic system
  - E. Pulleys, belts and idlers

### **NOTICE**

*The repair or replacement of any warranted part otherwise eligible for warranty coverage under the Emission Control Warranty may be excluded from such warranty coverage if Indmar demonstrates that the engine has been abused, neglected, or improperly maintained and that such abuse neglect or improper maintenance was the direct cause of the need for repair or replacement of the part.*

The emission warranty covers damage to other engine components that is caused by the failure of a warranted part.

This manual contains written instructions for the proper maintenance and use of your inboard engine. All emission warranty parts are warranted by Indmar for the entire warranty period of the engine.

Emission warranted parts that are scheduled for regular inspection, but not regular replacement, are warranted by Indmar for the entire warranty period of the inboard engine.

Add-on or modified parts that are not exempted by the Air Resources Board may not be used. The use of any non-exempt add-on or modified parts by the ultimate purchaser will be grounds for disallowing a warranty claim made in accordance with these warranty articles. The engine manufacturer will not be liable under this article to warrant failures or warranted parts caused by the use of a non-exempted add-on or modified part.

Any emission warranty part repaired or replaced under the terms of this warranty statement is warranted by Indmar for the remainder of the warranty period of the original part. All parts replaced under this limited warranty become the property of Indmar.

If the ownership of a product is transferred during Emission Components Warranty period, this warranty shall also be transferred and be valid for the remaining coverage period provided that Indmar is notified in the following way:

- a. The former owner contacts Indmar and provides us with the required information listed below; or
- b. Indmar receives a proof that the former owner agreed to the transfer of ownership and we are provided with the information listed below.
  - Current owner's name, address, telephone, engine serial number and date of purchase
  - New owner's name, address, telephone, engine serial number and date of transfer

Send the above information to:

Indmar Marine Engines  
Attention: Emission Warranty Transfer  
5400 Old Millington Rd  
Millington, TN 38053

### **NOTICE**

*The above procedure is valid for the transfer of the Emission Components warranty only. Refer to the Limited Warranty in Appendix C of this manual for information regarding warranty transfer of the remaining engine components.*

## **EMISSION MAINTENANCE REQUIREMENTS**

The following component maintenance is required to maintain the Emission Control System of your engine. Refer to Section 7, Maintenance, for procedures.

- Engine Oil and Filter: Change oil and filter after the first 10-20 hours then every 50 hours or annually for 575 models and every 75 hours or annually for 400, 440, and 460 models.
- Flame Arrestor: Clean every 100 hours. Replace as necessary. Some engines are equipped with a wire mesh flame arrestor that will last the life of the engine with regular cleaning unless damaged.
- Spark Plugs: Replace every 500 hours.
- Spark Plug Wires: Inspect annually. Replace as necessary.

### **NOTICE**

*Ignition timing, engine idle speed and air-fuel mixture are not adjustable on this engine. NO OTHER ADJUSTMENTS NEEDED.*

## **CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS**

The California Air Resources Board and Indmar Products are pleased to explain the emission control system warranty on your 2025 or later inboard engine. In California, new inboard engines must be designed, built and equipped to meet the State's stringent anti-smog standards.

Indmar Products must warrant the emission control system on your inboard engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your inboard engine.

Your emission control system may include parts such as the carburetor or fuel injection system, the ignition system, and catalytic converter. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, Indmar Products will repair your inboard engine at no cost to you, including diagnosis, parts and labor.



## **Manufacturer's Warranty Coverage**

For inboard marine engines 373 kilowatts (500 hp) and less: select emission control parts from your model year 2025 or later inboard engine are warranted for 3 years or 480 hours, whichever first occurs.

For inboard marine engines greater than 373 kilowatts (500 hp): select electronic emission-related control parts from your model year 2025 or later inboard engine are warranted for 3 years or 480 hours, whichever first occurs. Select mechanical emission related components are warranted for 3 years or 150 hours of operation, whichever first occurs.

However, warranty coverage based on the hourly period is only permitted for engines equipped with hour meters. If any emission related part on your engine is defective under warranty, the part will be replaced or repaired by Indmar Products.

## **Owner's Warranty Responsibilities**

As the inboard engine owner, you are responsible for the performance of the required maintenance listed in your owner's manual. Indmar Products recommends that you retain all receipts covering maintenance on your inboard engine, but Indmar Products cannot deny warranty solely for the lack of receipts or your failure to ensure the performance of all scheduled maintenance.

As the inboard engine owner, you should be aware that Indmar Products may deny you warranty coverage if your inboard engine or part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

You are responsible for presenting your inboard engine to an Indmar Products service center as soon as a problem exists. The warranty repairs will be completed in a reasonable amount of time, generally within 30 days.

If you have any questions regarding your warranty rights and responsibilities, you should contact Indmar Customer Service at [customerservice@indmar.com](mailto:customerservice@indmar.com) or 1-901-353-9930.


# NOTES

# Section One

## SAFETY

The words DANGER, WARNING, CAUTION and NOTICE are used throughout this manual to highlight important information. Be certain that the meanings of these alerts are known to all who work on or near the equipment.

Follow the safety information throughout this manual in addition to the safety policies and procedures of your employer.

 This safety alert symbol appears with most safety statements. It means attention, become alert, your safety is involved! Please read and abide by the message that follows the safety alert symbol.

### **DANGER**

**Indicates a hazardous situation which, if not avoided, will result in death or serious injury.**

### **WARNING**

**Indicates a hazardous situation which, if not avoided, could result in death or serious injury.**

### **CAUTION**

**Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.**

### **NOTICE**

*Indicates a situation which can cause damage to the engine, personal property and/or the environment, or cause the equipment to operate improperly.*

**NOTE:** *Indicates a procedure, practice or condition that should be followed in order for the engine or component to function in the manner intended.*

### CARBON MONOXIDE GAS



#### **DANGER**

**Carbon monoxide gas (CO) is colorless, odorless and extremely dangerous. All engines and fuel burning appliances produce CO as exhaust. Direct and prolonged exposure to CO will cause BRAIN DAMAGE or DEATH. Signs of exposure to CO include nausea, dizziness and drowsiness. Ensure adequate ventilation to prevent accumulation of CO in the boat.**

Each year, boaters are injured or killed by carbon monoxide. Virtually all of these injuries and deaths are preventable. Carbon monoxide is a potentially deadly gas produced anytime a carbon-based fuel, such as gasoline, burns. Carbon monoxide sources on your boat include gasoline engines and generators, cooking ranges, space heaters and water heaters.

Do not confuse carbon monoxide poisoning with seasickness, intoxication or heat stress. If someone complains of irritated eyes, headache, nausea, weakness, dizziness or drowsiness, or you suspect carbon monoxide poisoning, immediately move the person to fresh air, investigate the cause and take corrective action. Seek medical attention if necessary.

Indmar engines are equipped with catalytic converters which significantly reduce harmful CO emissions, but it is important that all of the DO's and DON'Ts still be followed.

Please follow these **DOs** and **DON'Ts** to ensure a safe boating experience every time.

**DON'T** start the engine or let it run for any length of time in an enclosed area. Always operate the engine in an open area.

**DON'T** swim or sit near the swim platform when any engine is running.

**DON'T** hold on to the swim platform while the boat is underway (no "Teak Surfing").

**DON'T** moor next to another boat whose engine is running.

**DON'T** confuse carbon monoxide poisoning with seasickness or intoxication.

**DO** immediately move the person to fresh air, investigate the cause and take corrective action if someone on board complains of irritated eyes, headache, nausea, weakness or dizziness. Seek medical attention if necessary.

**DO** make sure generators are properly ventilated and keep engine and generator exhausts clear.

**DO** always shut off engine and generator when moored, anchored or standing still.

**DO** be aware that the station wagon effect, or backdrafting, can cause carbon monoxide to accumulate inside the cabin, cockpit and bilge when the boat is underway, moving at slow speed or idling.

**DO** keep your boat's engine well-maintained and regularly check to make sure carbon monoxide detectors in the cabin are working properly.

**DO** always wear a properly fitted life jacket while in or around water.

For more information on carbon monoxide and boats, contact the US Coast Guard Office of Boating Safety at [www.uscgboating.org](http://www.uscgboating.org) or your state boating law administrator at 1-859-225-9487 or [www.nasbla.org](http://www.nasbla.org).

## FUEL



**DANGER**

**Gasoline (petrol) is extremely flammable and highly explosive under certain conditions. Explosive gasoline fumes may accumulate in the engine compartment. Failure to properly ventilate fumes with the bilge blower may result in explosive atmosphere.**

Indmar marine engines use gasoline (petrol) for fuel. The area under the engine and around the gasoline tank and supply lines is not open to outside air. Ventilation around these areas must be provided by your bilge blower system and air vents located around the boat. We recommend taking time out to carefully inspect your boat at least once a day for gasoline fumes, oil leaks, and areas where wiring may be worn or damaged.



**WARNING**

**Always operate the bilge blower at least 4 minutes prior to starting the engine. Raise the engine cover to ventilate fumes. Inspect the engine and compartment for any fluid or fuel leaks.**

- Do not smoke or allow open flames or sparks nearby when refueling.
- Always stop the engine before refueling.
- Maintain contact between the fuel nozzle and the fuel tank or container to prevent electrostatic spark. Do not use a plastic funnel.
- Do not block fuel vents.
- Do not store fuel in any containers or compartments which are not designated for fuel storage and do not use these storage areas for any other purpose.

## BATTERY



### DANGER

**Explosive battery fumes may accumulate in the engine compartment. While the engine is running or the battery is charging, hydrogen gas is being produced by a lead acid battery and can be easily ignited. Failure to properly ventilate fumes with the bilge blower may result in explosive atmosphere.**

- Wear personal protective equipment when working on or around batteries.
- Do not smoke or bring a flame near a battery.
- Do not check for a dead battery by placing a metal object between the battery posts. Sparks could cause an explosion.
- Do not place your head directly above a battery when making or breaking electrical connections.

## ENGINE OIL



### WARNING

**Wear protective equipment and use caution when checking and changing the engine oil. Engine oil may be hot.**

- Prolonged and repeated contact with used engine oil may cause skin cancer.
- Avoid direct skin contact with used engine oil. If skin contact is made, wash thoroughly with soap or hand cleaner as soon as possible.
- Keep used engine oil out of the reach of children.
- Used engine oil is a hazardous material. Dispose of properly.

### CLEANING SOLVENTS

 **WARNING**

**Always read and comply with the solvent manufacturer's recommendations for proper use and handling of solvents.**

- Do not use gasoline, paint thinners or other highly volatile fluids for cleaning.
- Do not mix cleaning agents together; harmful vapors may be release.

### ENTANGLEMENT

 **WARNING**

**Rotating or moving parts can entangle or sever body parts.**

- Do not wear jewelry, unbuttoned cuffs, ties or loose-fitting clothing.
- Tie long hair back when working near moving or rotating parts.
- Keep hands, feet and tools away from all moving parts.

### ENVIRONMENTAL

#### **NOTICE**

*Always be environmentally responsible. Follow the guidelines of the EPA or other governmental agencies for the proper disposal of hazardous materials such as engine oil, anti-freeze and fuel. Consult the local authorities or reclamation facility.*



# Section Two

## GENERAL INFORMATION

Before operating or maintaining the engine, review “Safety” on page 1-1.

### FUEL SYSTEM

#### WARNING

**Never remove or modify any components of the engine’s fuel system. Tampering with fuel components may cause a hazardous condition that could result in severe personal injury or death. This work must be performed by your Indmar dealer’s technicians.**

#### WARNING

**The fuel system is under pressure. Do not attempt to repair or replace any components of the fuel system. They are special marine parts and may require special service tools and procedures. You could damage the fuel system by not using specified tools. This could cause a fire or explosion.**

The Indmar fuel system uses high quality marine grade components. These components will tolerate small amounts of water without sustaining damage. Your engine will misfire and run poorly, however, if water is in the fuel. Use caution when re-fueling not to allow water to enter the fuel system. If you suspect your fuel is water contaminated, consult your dealer and avoid that fuel source in the future.

See your dealer for assistance with fuel system repairs.

**WARNING! Fuel is extremely flammable and explosive under certain conditions.** When refueling, stop the engine. Close all hatches and ports, and make sure all electrical components are switched off. After fueling is complete, open the engine compartment and inspect for fuel or vapors. Run the blower for at least four minutes before starting the engine(s).

**Don't run out of fuel!** The fuel pump that supplies the high-pressure fuel required by the engine is cooled and lubricated by the fuel that is being pumped. Any time the boat runs out of fuel, the pump is not being cooled and lubricated properly and sustains a certain amount of damage. If the fuel "runs dry" several times, the damage to the pump will be cumulative, resulting in an expensive fuel pump failure.

If an engine fails and it is determined that the failure was due to improper fuel with too low of an octane rating, too much alcohol, water content greater than 1000 PPM or any combination of these conditions, the failure will not be covered by the Indmar Limited Warranty.

## Indmar Fuel Recommendations

### APPROVED FUELS RAPTOR SERIES

6.2L MODEL	GASOLINE (PETRO) OCTANE	ETHANOL %				
		0%	10%	15%	30%	85%
400   440	Mid-Grade 89 Octane	✓	✓	X	X	X
460   575	Premium 91-93 Octane	✓	✓	X	X	X
ALL MODELS	Regular	X	X	X	X	X

### WARNING

**Using fuel with an octane rating lower than 87 octane can cause catastrophic engine damage that is not covered under the Indmar Limited Warranty.**

Our engines, except for the 460 Model and the Supercharged 575, are designed to run on mid-range (89 octane) fuel. The 460 and SC575 are designed to run on Premium (91-93 octane) fuel. Using fuel with a lower octane rating than recommended and a minimum of 87 octane will result in reduced performance and drive-ability. Use of fuels with an octane rating below 87 will reduce performance even further and may cause catastrophic engine damage that is not covered by Indmar's Limited Warranty.

There are no substitutes for the correct octane fuel. Octane booster chemicals that are available at auto parts stores are not enough to raise 87 octane fuel to 89 octane or to raise 89 octane to 91.

Indmar recommends purchasing fuel from a supplier that advertises that the fuel meets "TOP TIER" specifications. This fuel has additives and detergents that will reduce the buildup of deposits in the engine. For a current list of gasoline retailers supplying TOP TIER gasoline, go to [www.toptiergas.com](http://www.toptiergas.com) and click on LICENSED BRANDS.

Over time, oxidation of gasoline can form a buildup of harmful solids called gums. Water and impurities in the fuel system can cause corrosion. To stabilize the fuel and prevent oxidation, gum buildup, and corrosion throughout the boating season, add STA-BIL 360 Marine Fuel Treatment & Additive product to the fuel tank after each fill-up.

## **Using Oxygenated Fuels or Fuels with Alcohol**

Ethyl alcohol, ethanol or grain alcohol is acceptable as long as it is a blend and the blended fuel contains no more than 10% ethanol.

### **NOTICE**

*Fuels that are blended to contain more than 10% ethanol must not be used in Indmar engines. Fuels that contain more than 10% ethanol will damage your engine. Damages caused by the use of fuels that contain more than 10% ethanol are not covered by your warranty.*

### NOTICE

*Fuels that are blended to contain methanol or wood alcohol should not be used in Indmar engines. These fuels can corrode metal parts in your fuel system and engine. Fuels that contain methanol will damage your engine. Damage caused by the use of fuels that contain methanol is not covered by your warranty.*



While it is always preferable to use fuel that does not contain alcohol, all current Indmar engines are designed to operate on E10 (10% maximum ethanol) fuel. Any fuel containing more than 10% ethanol is not only unacceptable to use but is also illegal to use in a boat. Damage sustained from fuel with an alcohol content greater than 10% WILL NOT be covered under the Indmar Limited Warranty.

When fuel containing alcohol is exposed to water, the alcohol in the fuel more readily mixes the water and actually creates a cloudy layer of water/alcohol mixture in the bottom of the fuel tank and a layer of gasoline on the top. Because the gasoline layer has had some or all of the alcohol removed from it, the remaining fuel will be of lower octane because alcohol in the fuel raises the octane. Since fuel is pulled from the bottom of the tank, the first liquid that the fuel pump is going to push into the engine's fuel system is going to be a mixture of alcohol and water that will not burn. There are no chemical solutions that will reverse this condition. The tank will have to be drained and the contents disposed of and the fuel system, fuel lines, injectors, etc., will have to be flushed with clean fuel to get the alcohol/water solution out of the system.

When using fuel containing alcohol, we recommend purchasing fuel in smaller quantities that will be consumed during a weekend of boating. Fuel degrades pretty quickly and the engine operates better on fresh fuel. Use STA-BIL 360 Marine Fuel Treatment & Additive to treat any remaining fuel to reduce the degradation.

Buy fuel from a busy station that sells lots of fuel. There will be a better chance that the fuel will be fresh.

## Biobutanol-Blended Gasoline

Engines covered by this manual have been approved by Indmar for operation on gasoline blended with 16% Biobutanol, or **Bu16**.

Use of Biobutanol will **not** void the warranty of Indmar gasoline engines.

Indmar and the National Marine Manufacturers Association encourage the use of Biobutanol in marine engines.

Biobutanol (either isobutanol or n-butanol) is created from biomass and is blended with gasoline to help meet renewable fuel mandates and clean air standards. Bu16 contains a higher percentage (16%) of renewable fuels than traditional E10 gasoline (10%), without sacrificing engine performance or reliability.

Bu16 can be mixed with any E10 or other approved fuel already in the boat's fuel tank(s).

Biobutanol is chemically different from ethanol and does not have ethanol's negative characteristics when blended in fuel. The Bu16 fuel blend does not absorb water like E10; the phase separation common in E10 fuel does not occur in Bu16. Isobutanol is not a corrosive agent (ethanol is highly corrosive) and will not damage fuel system parts. These characteristics, combined with a significantly higher energy content, make Bu16 fuel ideal for marine engines.



## Fuels in Other Countries

If you operate your Indmar engine outside the USA or Canada, unleaded fuels may be difficult to obtain. Leaded fuels must not be used in engines with catalytic converters or serious damage will occur.

### BATTERY

Start Battery - 800 CCA / 1,000 MCA lead acid or AGM start batteries are required.

Deep Cycle/Gel Cell/Leisure batteries are not recommended for engine starting. These batteries may be used for accessory loads such as: ballast pumps, thrusters, stereos and amplifiers but should be isolated from the starting circuit.

Lithium Ion batteries are not compatible with current engine charging technologies and **MUST NOT** be used.

Use of Lithium Ion batteries will compromise the Indmar Limited Warranty and may result in a dangerous electrical system malfunction.

### Battery Switches

Most of today's boats have significant electrical requirements and are equipped with two batteries. The batteries are generally controlled with a 4-position switch that allows the boat operator to select which battery(s) will be connected to the starting/charging system of the engine. The switches generally have 4 positions: OFF, 1, 2, and 1+2.



**FIGURE 2.1 | BATTERY SWITCH**

**Off Position**, neither of the batteries are connected to the engine's starting or charging system. The switch should be in the OFF position when the boat is not being used to ensure that the batteries do not lose their charge. The switch should also be in the OFF position when an external battery charger is being used to charge the battery(s) to avoid possible damage to the electronic components on the engine or in the boat.

**NOTE:** *Avoid turning the switch to any other position while the engine is running. If the switch is turned to the OFF position with the engine running, the alternator will be permanently damaged and will not be covered by Indmar's Limited Warranty.*

**1 Position** is the main battery. Normally when the battery switch is not OFF, it should be set on 1.

**2 Position** is the reserve or back-up battery and should only be used if battery 1 has become depleted and the reserve battery is needed to start the engine.

**1 and 2 Position** is available but not recommended, as power will be drawn from both batteries and the alternator may not be able to keep both batteries charged simultaneously. Position 1+2 would be used in an emergency situation where both batteries are low and power is needed from both batteries to start the engine. Once the engine has started, carefully select battery 1 or battery 2 to direct all of the charging current to one battery.

**NOTE:** *Never use the charging systems' alternator to bring a dead or undercharged battery to a fully charged condition. The excessive current draw can overheat the alternator and cause it to fail. If you have a dead battery, use an external battery charger to bring the battery to a fully charged condition.*

### **NOTICE**


*Use caution when connecting the battery cables. Improperly connecting the battery cables or using the wrong battery type can damage electrical components. These damages are not covered by your warranty.*

*When disconnecting or reconnecting battery cables, always disconnect the negative (black or yellow) battery cable first. When connecting battery cables, always connect the positive (red) battery cable first.*

Before disconnecting the battery, make sure the battery switch (if equipped), ignition key and all accessories are in the OFF position.

Be sure to connect cables properly:

1. Red cable to the positive or (+) post (connect first)
2. Black or yellow cable to the negative or (-) post (connect second)

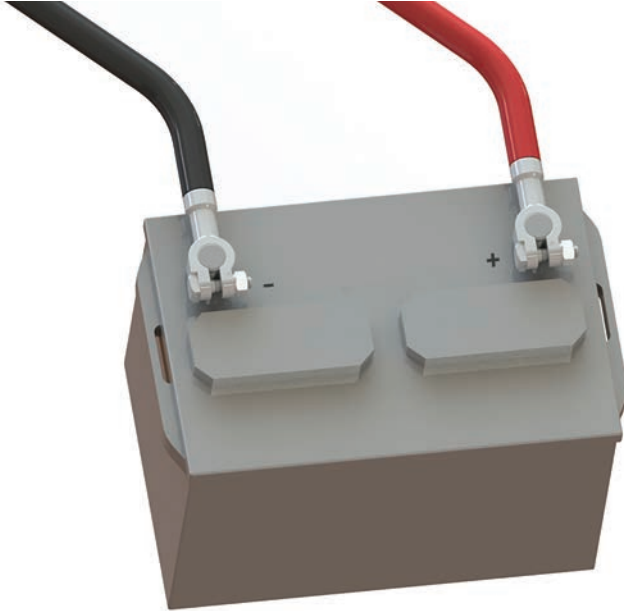

**FIGURE 2.2 | MARINE BATTERY**

Additional electrical loads exceeding 30 amps must be connected to the house battery and separated from the engine electrical system.



## **“SERVICE REQUIRED” OR “CHECK ENGINE” INDICATOR**

Some boats are equipped with a digital dash which displays the words **“SERVICE REQUIRED”** and/or **“CHECK ENGINE,”** and some boats are equipped with a Check Engine light. This alerts you when the ECM (Engine Control Module) detects a possible engine problem. If the indicator goes on, return to dealer for service.

In addition to the check engine light, some boat manufacturers have digital displays on the dashboard of the boat that display trouble/fault codes generated by the OBD-M system. These displays may not always be accurate and the information displayed might not indicate the actual problem. We recommend that you contact your dealer when you have a trouble/fault code displayed to have the issue verified with a Diagnostic Scan Tool.

Engines may enter a Power Reduction mode. Power reduction limits the engine throttle opening to a “safe maneuvering” speed. This mode is intended to allow the driver to get out of harm’s way and to reach safe harbor for engine service.

If the check engine indicator should go on, or if the engine enters the Power Reduction mode, you should have your dealer check the engine as soon as possible.

### **NOTICE**

***Schedule engine service at once when this light is illuminated. Failure to have your engine serviced when a check engine light signal is given, may cause damage to your engine or your emissions system.***


See “Sea Strainer/Flushing Device” on page 7-12 in this manual for information regarding the Indmar Strainer Pro.

Engine De-rate for some of the more severe DTCs will no longer be reset through an ignition or battery cycle. These DTCs must be properly diagnosed and cleared with a diagnostic tool or the engine must be operated for no less than 15 run cycles without an active fault before resuming normal rated power.

### ENGINE COOLING

*NOTICE: Running engine without adequate cooling can cause engine to overheat and may result in fire and/or explosion.* Overheating the engine can cause severe damage or failure that is not covered by Indmar's Limited Warranty. Engines have two water pumps. One circulates coolant throughout the engine. The other pump uses water from the sea, lake or river to feed raw water to the engine. The raw water is supplied to the engine cooling system by the jet pump. Consult the jet pump Operators Manual for specifics.

Do not run the engine unless the boat is in water. If you run the engine with the boat out of the water, the jet pump, exhaust hoses and other components may be damaged, causing your engine to overheat or start a fire. This will void the warranty.

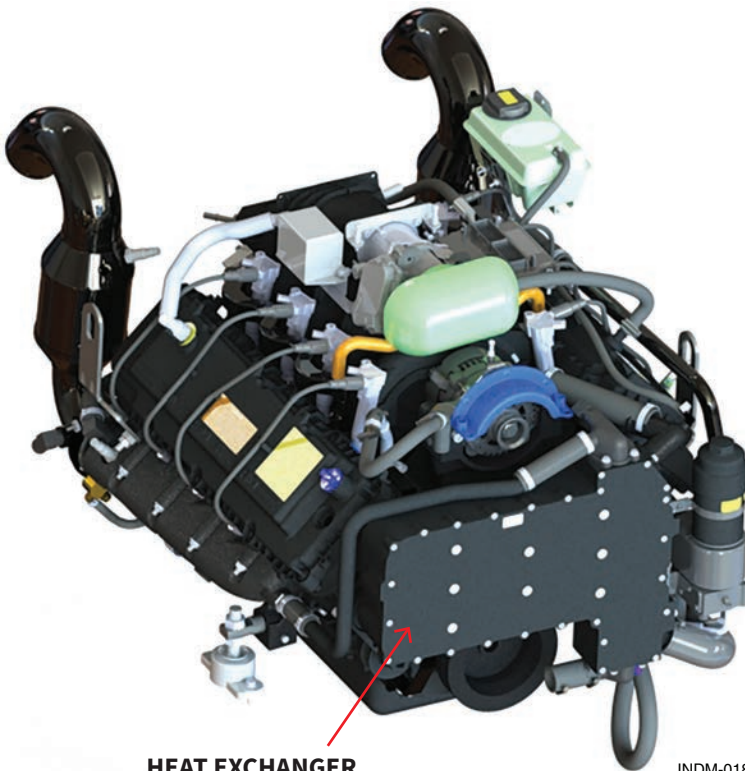

**HEAT EXCHANGER**

INDM-0188

**FIGURE 2.3**

**NOTICE**

*The impeller in the jet pump can be damaged from running dry or by picking up sand or silt through the water intake. Inspect your water pump impeller annually or more often if you operate your boat in shallow water or run it aground. Impeller failure will result in an overheated engine.*

**NOTICE**

*Running your engine with your boat out of water will damage or ruin your engine and jet pump. Damage to your engine caused by overheating is not covered by your warranty.*

**NOTICE**

*Running the engine during the RPM reduction phase may cause severe damage to your engine.*

- Monitor the temperature and oil gauges continuously.
- If the temperature rises past 210° F (99° C) or your oil pressure drops below 10 psi (69 kPa), severe engine damage may result.

*Damage due to running the engine with excessive temperature or low oil pressure is not covered by your warranty.*

**NOTICE**

*Your Indmar Marine Engine is cooled by pumping water from the body of water that the engine is being operated in through the heat exchanger. Freezing temperatures will severely damage the cooling system components and exhaust system components. Contact your dealer or refer to Section 8, Storage and Winter Lay-Up for draining instructions.*

**AQUATIC INVASIVE SPECIES (AIS) PREVENTION**

The threat of the spread of Aquatic Invasive Species (AIS) has the potential to seriously and detrimentally impact the boating experience and the future of the boating lifestyle. Aquatic invasive species are non-native plants and animals that negatively impact freshwater environments.

**NOTICE**

*The jet pump is not supplied by Indmar and is sourced from a third party. Contact your boatbuilder or dealer for Service and Warranty information on your jet unit.*

### Draining

Laws/Regulations vary from state to state, so please be aware of any regulations that apply to you. In most situations, draining the water from the engine and drive train will be sufficient to meet the requirements of AIS prevention of the engine/drive train.

Draining instructions for your engine/drive train can be found in “Storage and Winter Lay-Up” on page 8-1 in this manual.

**NOTE:** *Please refer to the draining documentation from your boat manufacturer for draining procedures of components such as ballast tanks in your boat.*

### Decontamination

In some areas/situations, decontamination of the raw water portion of the engine/drive train may be necessary. If decontamination is required, follow the regulations in force for the area you are in. The following procedures will help you through the process. Drain the engine as described in “Storage and Winter Lay-Up” on page 8-1 of this manual. Reinstall the drain plugs in their designated locations.

**NOTE:** *Please refer to the decontamination documentation from your boat manufacturer for decontamination procedures of components such as ballast tanks in your boat.*

**Flush the engine/drive train using the Indmar Strainer Pro or other permanently mounted flushing device.**

#### **WARNING**

**Engine MUST NOT be run with the boat out of the water with the Indmar Strainer Pro or alternate flushing device. Engine and jet pump damage will occur that is not covered under the respective warranties.**

**NOTE:** *Read the entire procedure before starting.*

An added feature of the Indmar Strainer Pro is the built-in flushing connection to flush your engine with fresh water:

1. If your boat is equipped with a shut-off valve (sea cock), make sure it is in the ON or OPEN position. Do not start the engine.
2. Remove the flushing protection plug from the Indmar Strainer Pro.
3. Attach the water hose (generally hot 140-degree water) to the flush fitting on the Strainer Pro or other permanently mounted flushing device.
4. Turn on the hot water supply to the hose between 1/4 and 1/2 pressure. Hot water will exit the boat through the thru-hull fitting in the bottom of the boat. This will ensure that the water inlet hose and thru-hull pickup have been decontaminated. Continue flushing per the instructions in your area (generally two to three minutes).
5. After the appropriate flushing time, turn off the hot water supply.
6. Place the shut-off valve (sea cock) in the boat to the CLOSED or OFF position to force all of the water through the engine/drive train.
7. Turn on the hot water supply to approximately 1/2 pressure.
8. DO NOT start the engine.
9. Allow water to flow for 3-5 minutes or as directed by on-site decontamination personnel.
10. Turn water supply off.
11. Remove water supply hose from the Strainer Pro or other flushing device and replace the flush protection plug.
12. If the boat is equipped with a shut-off valve (sea cock), place it in the OPEN or ON position.

### EXHAUST HOSES

**DANGER! Carbon monoxide gas (CO) is colorless, odorless and extremely dangerous.** Exhaust hoses on most boats carry exhaust gases from the engine outside of the boat. These hoses carry water that has been used to cool the engine. This water keeps the hoses cool and prevents them from melting.

Monitor the engine temperature gauge frequently. If your engine overheats, carefully inspect the exhaust hoses for damage. Damaged hoses can allow carbon monoxide gas and seawater to enter your boat.

### SELECTING AN IMPELLER

Contact the boat manufacturer for recommended impeller sizes.

Your boatbuilder has selected the impeller to maximize performance of your boat model.

Elevation and weather also have a very noticeable effect on the wide-open-throttle power of an engine. There is a 3% power output drop per 1000 feet of altitude above sea level. Since air (containing oxygen) gets thinner as elevation increases, the engine begins to starve for air. Humidity, barometric pressure and temperature have a noticeable effect on the density of air since heat and humidity thin the air. This phenomenon can become particularly apparent when an engine is propped out on a cool dry day in spring and later, on a hot, humid day in summer, does not have the same performance.


# Section Three

## PRE-START CHECKS

Before operating or maintaining the engine, review “Safety” on page 1-1.

### PRE-START CHECKS

Perform the pre-start checks before each time you operate the engine. If you have questions about any of these procedures, see your Indmar dealer for assistance.

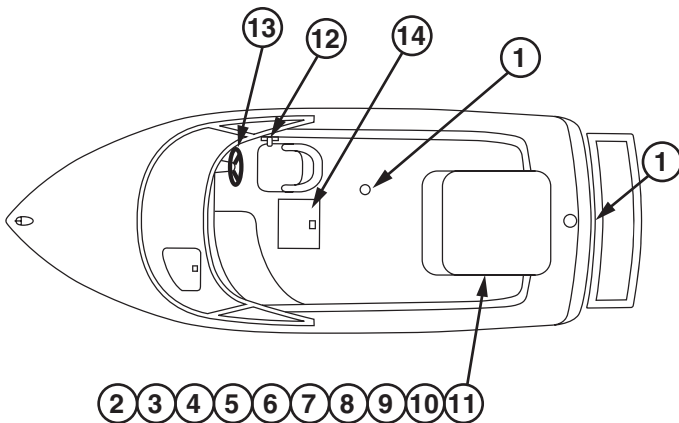

INDM-0027a

**FIGURE 3.1 | PRE-START CHECK POINTS**

1. Check the boat hull and/or garboard drain plug. Make sure they are installed and secure.
2. Carefully inspect engine compartment for signs of fluid leakage and proper ventilation. Unlike autos, marine engine compartments require positive ventilation and air re-circulation to ensure that flammable and explosive vapors are safely dispersed in an environmentally sound manner.

3. Make sure all engine drain plugs are installed. Refer to Section 8, Storage and Winter Lay-Up. There are several drain locations:

**Block** – The 6.2L engine block is cooled by anti-freeze coolant. Coolant is drained from the block only when the required coolant change interval is reached.

**Exhaust** – The drain hose between the exhaust manifolds must be connected.

**Fresh Water Cooling System** – The heat exchanger has a single drainage point that can be accessed by removing the anode or drain plug. Refer to “Storage and Winter Lay-Up” on page 8-1.

4. Check engine oil level with the dipstick. Do not overfill.




INDM-A003

**FIGURE 3.2 | ENGINE DIPSTICK LEVEL**

5. **WARNING! Frequently inspect fuel lines and connections for leaks or deterioration.** Verify fuel lines are tight and there is no leakage present.
6. Inspect oil lines and oil filter. Ensure they are tight and no leakage is present.



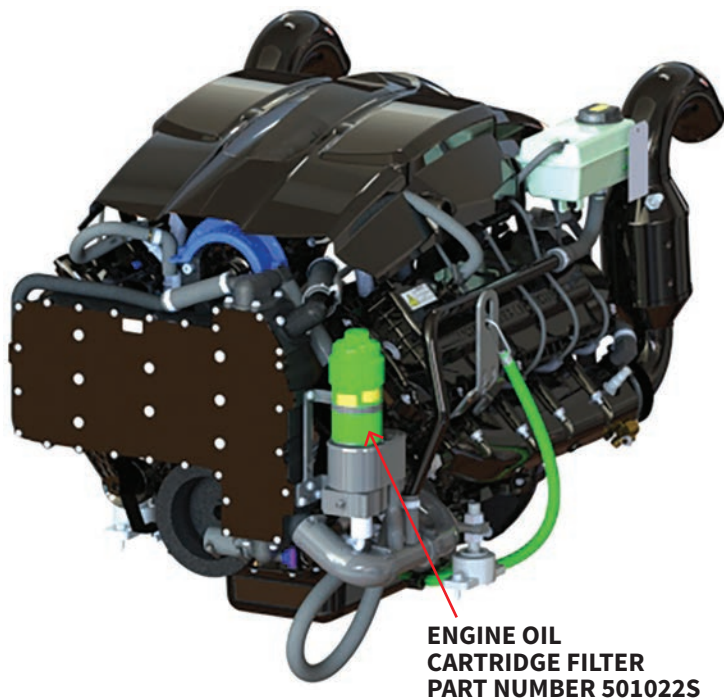


INDM\_0189

**FIGURE 3.3**

7. Your engine is equipped with a fresh water cooling system. Check coolant level in the expansion tank.
8. Check serpentine belt for wear and proper tension.
9. Verify that exhaust hoses are in good condition and clamped tight.
10. Verify engine mounts are tight.
11. Check electrical connections and ensure connectors are tight. Check wiring for signs of wear and abrasion.
12. Verify throttle/shift control is functional and properly adjusted.
13. Verify steering controls are functional and properly adjusted.

14. Verify battery connections are clean and securely fastened.  
Make sure the battery is fully charged.

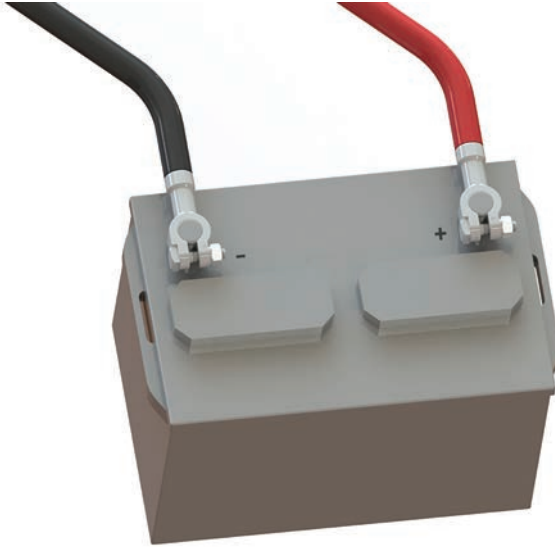

**FIGURE 3.4 | BATTERY CONNECTIONS**

15. Check the boat's owner's manual for additional pre-operation checks.

# Section Four

## FIRST-TIME OPERATION AND BREAK-IN

Before operating or maintaining the engine, review “Safety” on page 1-1.

### WARNING

**Always operate the bilge blower at least 4 minutes prior to starting the engine. Raise the engine cover to ventilate fumes. Inspect the engine and compartment for any fluid or fuel leaks.**

### WARNING

**Jet boats are not required to have “start in gear” protection under U.S.C.G. Regulations. “Start in gear” protection is required by Indmar and boats built to ABYC standards and holding ABYC Certification status. Depending on how your boat is configured by the manufacturer it may be possible to start the engine in either forward or reverse. Consult your dealer or boat manufacturer for details regarding your vessel. Verify shift lever is in neutral position before cranking engine.**

### NOTICE

*A new engine may use a more than normal amount of engine oil before it is broken in. Check your oil level hourly during the break-in period. Once the engine is broken in, check the oil level before each day’s use and more often during sustained periods of high RPM or heavily loaded operation. Marine usage is different from automobile usage and oil consumption is EXPECTED. Do not be alarmed if you have to add oil between oil changes.*

### FIRST-TIME OPERATION


**NOTE:** *As of April 1, 2021, U.S. federal law mandates the use of the emergency stop switch by the operator under most conditions. Please familiarize yourself with the laws in your area.*

1. Perform the Pre-Start Checks. Refer to “Section 3.”
2. Back the trailer into the water. **NOTICE:** *Make sure the engine water intakes are not blocked by the trailer bunk and the water intake is submerged.*

#### **NOTICE**

*Priming the fuel system is required before starting your engine for the first time. This allows the electric fuel pump to fill the fuel injection lines with gasoline. Each time you advance the ignition switch to the ON position, the fuel pump cycles for 2 seconds.*


3. This procedure is only necessary for the first time the engine is started or in the event the fuel tank is run dry. Prime the fuel system by cycling the fuel pump three to four times before the engine is started for the first time. To prime:
  - Turn the ignition key ON for 5 seconds.
  - Turn the ignition key OFF for 5 seconds.
  - Repeat above three to four times

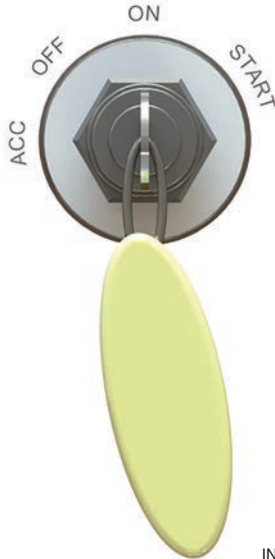

INDM\_0162

**FIGURE 4.1 | ENGINE ON SWITCH**

Typical Start/Stop Keypad

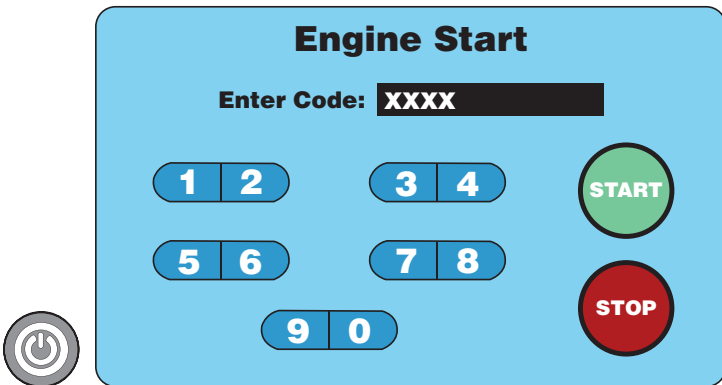

**FIGURE 4.2 | BASIC KEYPAD**

**NOTE:** Some boat manufacturers use touch pad starting rather than key switches. Refer to the boat operator's manual if your boat is so equipped.

- 4. WARNING! Operate the bilge blower for at least 4 minutes.** Start the engine (Refer to Section 5, Engine Starting Procedures) and allow it to reach normal operating temperature; keep a close eye on the gauges. If any of the gauges indicate an engine problem, stop the engine immediately and bring the boat to your Indmar dealer for assistance. *NOTICE: Do not operate the starter motor for than 15 seconds without a 2 minute cooldown period. Excessively long cranking times will permanently damage the starter motor and drain the battery.*

## BREAK-IN

Taking care now to break-in your new Indmar engine is VERY important. When properly broken in, your engine will last longer, run better and require fewer repairs over its lifetime. Your new Indmar engine does not require an elaborate break-in procedure, just a little care and common sense for the first 10 hours.

### Break-in Tips

- Always let engine warm up to normal operating temperature before accelerating.
- Avoid fast accelerations and don't carry (or pull) a heavy load during this period.
- If your boat is equipped with ballast tanks, do not use them during the first 10 hours.
- Check engine fluid levels frequently. During the first 50 to 100 hours, an engine can use more oil than usual. Maintain oil at proper levels at all times but do not overfill.
- Vary your boat speed during break-in. Do not run at the same speed very long.
- Observe gauge readings and check for loose mountings, fittings, nuts, bolts and clamps.
- Report abnormal operation, noises or vibrations to your dealer.

## Break-in Steps

*NOTICE: Do not exceed maximum RPM recommended for your engine.*

After the first ten hours but before 20 hours of operation, take your boat to the dealer for its first engine oil and filter change and engine checkup. Your Indmar dealer is best equipped to check the engine immediately after break-in.

After the break-in procedure is over, your boat may be operated at any speed. Be sure to check the wide open throttle operating range; refer to Section 2, Selecting an Impeller.

**NOTES**



# Section Five

## ENGINE STARTING PROCEDURES

Before operating or maintaining the engine, review “Safety” on page 1-1.

### NOTICE

*Current fuel injected engines are equipped with a feature called “Smart Start.” When the key is advanced to the START position, the starter will remain engaged and will crank the engine for 8 seconds or until the engine starts, whichever happens first. This same feature will prevent accidental engagement of the starter when the engine is running.*

### NOTICE

*Some boats are equipped with a pushbutton start instead of a key switch. Pushing the start button is the same function as turning the key to the START position.*

## HOW TO START YOUR ENGINE

- 1. WARNING! Operate the bilge blower for at least 4 minutes.** Run the blower for 4 minutes to remove explosive gasoline and battery fumes from the engine compartment.



INDM\_0163

FIGURE 5.1 | TYPICAL BLOWER SWITCH

2. Perform the Pre-Start Checks. Refer to *Section 3*.
3. Move the shift control lever to the NEUTRAL position. Without advancing the throttle lever, turn the starter key to START position.

 **WARNING**

**Jet boats are not required to have “start in gear” protection under U.S.C.G. Regulations. “Start in gear” protection is required by Indmar and boats built to ABYC standards and holding ABYC Certification status. Depending on how your boat is configured by the manufacturer it may be possible to start the engine in either forward or reverse. Consult your dealer or boat manufacturer for details regarding your vessel.**

**Verify shift lever is in neutral position before cranking engine.**

**NOTE:** *Indmar and ABYC also require that all single engine controls have a neutral lock that must be mechanically overridden by the operator.*

**NOTICE**

*Refer to the boat owner’s manual for ignition system information.*


- 4. When the engine starts to crank, you can release the key and let Smart Start take over. When the engine starts, it will gradually slow from a fast idle to normal idle. If engine is cold, it will operate at a slightly higher idle speed until warm-up is complete. Make sure that when you do shift into gear that you are at idle speed (less than 1100 RPM). Let engine warm up to normal operating temperature before accelerating.



INDM\_0164

**FIGURE 5.2 | START POSITION**

Typical Start/Stop Keypad

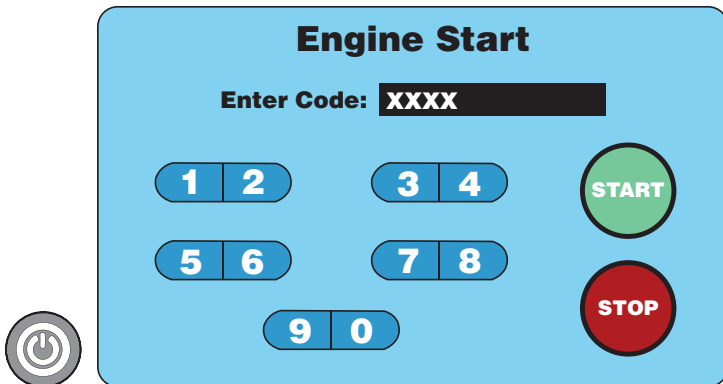

**FIGURE 5.3 | BASIC KEYPAD**

**NOTE:** Some boat manufacturers use touch pad starting rather than key switches. Refer to the boat operator's manual if your boat is so equipped.

### **NOTICE**

*Once the engine has started, immediately check the oil pressure. Monitor the oil pressure and engine temperature closely for the first 10 minutes of operation.*

## **IF ENGINE DOES NOT START**

### **NOTICE**

*Do not operate starter motor for more than 15 seconds without a 2 (two) minute cool-down period. Excessively long cranking times will permanently damage the starter motor and drain the battery. Damage from overheating the starter motor is not covered by the warranty.*

Turn the key to the START position. If the engine does not start, let the starter cool down for two minutes, engage neutral mode and advance the throttle lever about 1/4 of its total travel. Turn the key to START again and see if the engine starts.

If your engine does not start after several attempts, contact your dealer.

## **ENGINE RESTART**

1. If your engine is already warm and will not re-start, turn key to ON position and wait for about 20 seconds.
2. Make sure that your throttle lever is in NEUTRAL.
3. Turn key OFF. Try to start engine again. If it does not start, engage neutral mode and advance throttle to about 1/4 while holding key in the START position. When engine starts, release the key and immediately return throttle to IDLE position.

### **NOTICE**

*Additional electrical loads exceeding 30 amps must be connected to the house battery and separated from the engine electrical system.*

*Your engine is equipped with either a 95, 170 or 250 amp output alternator, consult your dealer to determine if a high output alternator is required.*

# **Section Six**

## **NORMAL OPERATION**

Before operating or maintaining the engine, review “Safety” on page 1-1.

### **SENSIBLE OPERATION**

The engine in your boat is built to exacting specifications and is designed to deliver unparalleled performance from idle speed to wide open throttle. Most recreational boating is done at low to moderate RPM, and that is where we have calibrated the engines to provide the highest torque and pulling power. Although occasional operation higher RPM is acceptable, we recommend for extended cruising, that the throttle be kept at a maximum of 80%. It is also important not to overload your boat by adding more weight and ballast than the boat was designed to handle. Damage to the engine that can be attributed to excessive RPM and/or loading may not be covered by the engine’s limited warranty.

### **DAILY ROUTINE**

1. Open the engine cover and check the bilge for water; pump bilge dry. Excessive amounts of water can indicate leakage problems from thru-hull fittings, loose or damaged hoses or hull damage. Excess water in the bilge will damage engine components (starters, alternators, etc.). Besides the obvious issues, if the crankshaft pulley is even partially submerged the serpentine belt will pick up water. The water picked up by the belt may pull water to the upper portion of the engine where it can be drawn into the engine through the flame arrestor. Make sure the engine’s beauty cover is in place to protect the top of the engine. Water intrusion from high water in the bilge is not covered by the Indmar Limited Warranty.

## NOTICE

*Do not allow excessive amounts of water to remain in the bilge. Component damage due to water is not covered by the warranty. Water can also be ingested through the flame arrestor if bilge water level is too high.*

2. Follow the starting procedures outlined in Section 5, Engine Starting Procedures.
3. Once the engine is started, allow it to reach operating temperatures of at least 120°-140°F (49°-60°C) before accelerating to speeds above 3000 RPM.



INDM\_0165

### FIGURE 6.1 | TYPICAL TEMPERATURE GAUGE

4. Monitor your gauges and warning lights frequently to ensure that engine temperatures and pressures are within the proper ranges.



INDM\_0166

### FIGURE 6.2 | TYPICAL OIL PRESSURE GAUGE

## OPERATING THE CONTROLS

Be sure to refer to the boat owner's manual for additional information. Should there be any difference between the information presented in this manual and the boat owner's manual, the boat owner's manual should take precedence.

The shift / throttle control is important to daily operation. Have your dealer check it regularly for proper adjustment and lubrication.

### NOTICE

*Do not use the throttle lever during the starting sequence. Your electronic engine controls should not need any throttle movement while starting.*



### WARNING

**Jet boats are not required to have “start in gear” protection under U.S.C.G. Regulations and depending on how your boat is configured by the manufacturer it may be possible to start the engine in either forward or reverse. Verify shift lever is in neutral position before cranking engine.**

Your engine may have a safety feature that allows the engine to crank only in the NEUTRAL position. If during the starting process your engine will not turn over, make sure that the shift / throttle control is in the NEUTRAL position and try again.

**NOTE:** *As of April 1, 2021, U.S. federal law mandates the use of the emergency stop switch by the operator under most conditions. Please familiarize yourself with the laws in your area.*

## SECTION SIX

All boats are required to have an **engine safety switch** (1, Figure 6.3 I) that can be activated if the driver moves from the helm position. The safety switch should always be connected to the operator when the boat is underway. If you experience a “no start” condition, verify that this switch has not been disabled. If the tether cord is pulled from the switch, it disables the ignition system so the boat cannot start.

Use **caution while operating shift lever**.  
Shift only while the engine is at idle.



INDM\_0167

**FIGURE 6.3 | TYPICAL TETHER CORD AND SAFETY SWITCH**

### **NOTICE**

*Avoid using high throttle settings when in reverse. This can force water backwards into the exhaust system and into the engine cylinders with major damage.*

### **⚠ CAUTION**

**HYDROSTATIC LOCK:** If water collects in the engine cylinder for any reason, it can cause hydrostatic lock, not allowing the pistons in the engine to move properly. Hydrostatic lock can severely damage your engine which is not covered by your warranty unless caused by defects in material or workmanship.



**UNUSUAL VIBRATION**

If your engine is used in a direct coupled application you need to know that damage to the drive train can cause vibration. You may feel vibration if damage is severe. Vibration in the drive train will cause excessive wear on engine components.

If you believe you hit something, or if you notice excessive vibration, see your dealer. Damage to your engine or drive train caused by vibration is not covered by your warranty.

**NOTES**

# Section Seven

## MAINTENANCE

Before operating or maintaining the engine, review “Safety” on page 1-1.



### WARNING

- **You can be injured if you try to work on your marine engine without knowing enough about your engine.**
- **Be sure you have the knowledge, experience and the correct replacement parts BEFORE you attempt any repairs.**
- **Be sure all fasteners you use are approved and rated for marine use. Use of improper parts can cause component or engine failure which may result in death or serious personal injury.**

## GENERAL SERVICE NOTES

Your Indmar dealer is your best source for engine repair and maintenance. Indmar certified technicians attend ongoing service training programs and have the proper diagnostic tools plus the latest specifications for your engine.



### DANGER

**Electrical, ignition and fuel system components on Indmar engines comply with U.S. Coast Guard rules and regulations to minimize risks of fire or explosion. Use of replacement electrical, ignition or fuel system components, which do not comply to these rules and regulations, could result in a fire or explosion hazard and should not be used.**

Your safety depends on your use of marine parts. When servicing the electrical, ignition and fuel systems, it is extremely important that all components are properly installed and tightened. If not, any electrical or ignition component could permit sparks to ignite fuel vapors from fuel system leaks, if they existed.

Since marine engines may be expected to operate at higher RPM ranges than typical automotive use for most of their life, and to operate in fresh and salt water environments, many special parts and fasteners are used which are quite different from standard automotive parts. Many parts are made from special corrosion resistant materials while other moving parts are heavy-duty for extended, high RPM duty. If you perform minor service procedures, make sure to use genuine Indmar parts for marine use.

### **NOTICE**

*If the temperature falls below the freezing point (32°F, 0°C) the raw water portion of your engine's cooling system must be drained. Refer to Section 8, Storage and Winter Lay-Up. Failure to drain the cooling system will result in severe damage to your engine and other cooling system components. Freeze damage is not covered by Indmar's Limited Warranty.*

### **NOTICE**

*Special maintenance procedures are required for engines that are operated in brackish or salt water. Refer to "Salt and Hard Water Operation" in this section for details.*

### **NOTICE**

*Never operate engine without adequate water supply. Failure to properly cool engine will cause severe engine damage and void your warranty. Running the engine without the boat being in the water can cause damage to your engine and jet pump. Consult your jet pump owners manual for guidance and requirements.*

**Special Note for Boats Operating on Small Ski Lakes**

Some operators choose to use their boats exclusively on small ski lakes where they never get an opportunity to run their engines for extended amounts of time (15 minutes or more) in the upper RPM range (above 4000 RPM). Many of these engines are also exposed to extended periods of idling RPM below 1000.

Boats used in these conditions often have engines that may suffer from fuel dilution of the motor oil. This condition is commonly referred to as “making oil” because the oil level on the dipstick appears to rise over time. Boats that are operated in these severe conditions will be required to have more frequent oil and filter changes (every 25 hours instead of every 75 hours).

## Scheduled Maintenance Chart

ITEM	SERVICE	FIRST 10-20 HOURS	EVERY 50 HOURS <sup>1</sup>	EVERY 75 HOURS (EVERY 50 HOURS FOR 575) OR ANNUALLY <sup>2</sup>	EVERY 300 HOURS OR ANNUALLY <sup>2</sup>	EVERY 500 HOURS	EVERY 2 YEARS
Engine Oil & Filter	Change	X		X			
Engine Coolant	Change						X
Spark Plugs*	Change					X	
Fuel Filter*	Replace		X		X		
Flame Arrestor	Clean/ Replace if damaged			X			
Belts	Inspect	X		X	X		
Spark Plug Wires*	Inspect				X		
Breather Hose*	Clean				X		
Heat Exchanger	Inspect/ Clean				X		
Zinc Anodes	Inspect			X			
	Replace**				X		
Fasteners, Clamps, Hoses	Check				X		

\* Services best accomplished by your Indmar dealer.

\*\* For best results, replace anodes annually during winterization.

<sup>1</sup> Severe use applications (see special note on previous page)

<sup>2</sup> Whichever occurs first


**NOTE:** *Oil change intervals may need to be decreased based on severity of service. Your boat may be equipped with a monitor to notify the operator when an oil change is due.*

## ENGINE OIL

### Oil Consumption

Just because an engine uses oil does not mean it is not healthy or it is defective. A marine engine gets worked very hard compared to an automobile engine. When you are cruising down the highway in your car, once it gets up to speed it only takes a small amount of the engine's power (around 20 HP) to maintain the speed of the vehicle on a flat road. A boat, on the other hand, is utilizing a significantly larger amount of the engine's output to keep the boat moving. Then add the extra load of ballast bags and a wakeboarder, surfer or skier and we are utilizing even more of the engine's capacity. The harder you work the engine, the more consumables (gasoline and oil) it needs to keep running. As long as there are not other detrimental operating characteristics such as low power, oil fouled plugs, constant smoking, etc., do not be concerned if the engine uses some oil ... it's the nature of the beast.


### Checking Oil

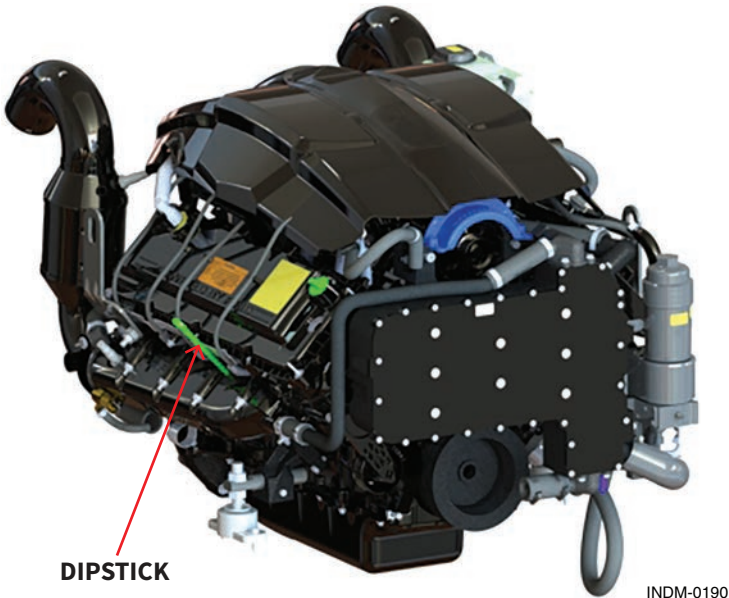

INDM-0190

**FIGURE 7.1 | ENGINE OIL DIPSTICK LOCATION**

Check the oil level with the dipstick at the start of the day and then every time you get fuel. To get an accurate reading, your engine should be warm and the boat should be level.

 

**FIGURE 7.2 | DIPSTICK**

### **NOTICE**

*For best results wait about 5 minutes after you turn off the engine to allow the oil to drain into the oil pan, giving you a more accurate reading.*

1. **CAUTION! Engine and engine oil may be hot.** Pull dipstick from engine.
2. Wipe oil off stick with clean towel/cloth.
3. Insert dipstick completely into the dipstick tube.
4. Remove dipstick and read oil level.
5. After reading is complete, return dipstick to tube.
6. Add oil if necessary.


### **Adding Oil**

If oil level on the dipstick reads below the ADD mark, add only enough oil to return level to FULL mark.

### **NOTICE**

*Do not overfill. If your oil level is above the full mark on the dipstick, the engine may be damaged.*

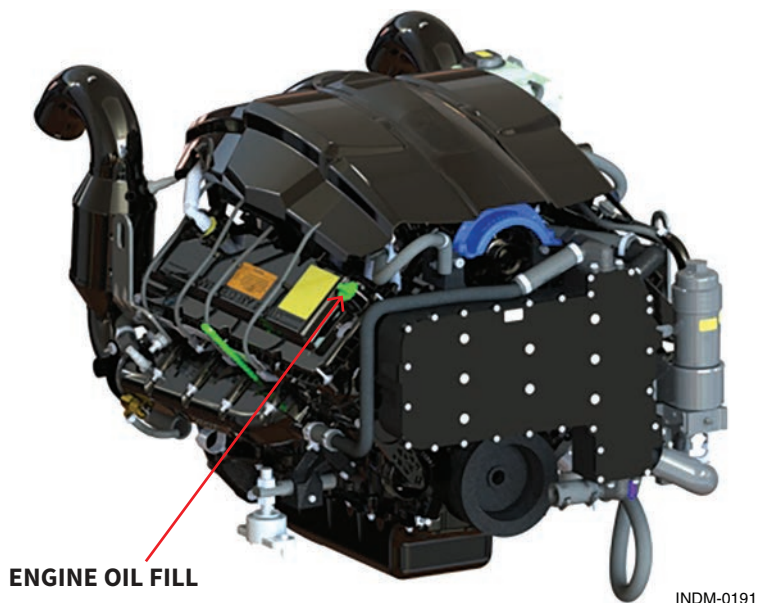

**FIGURE 7.3 | ENGINE OIL FILL**

**400 and 440 Premium Models** – Semi-synthetic 5W-30 oil meeting API rating SN or SP (Indmar 872004)

**460 and SC575 Models** – Fully synthetic 15W-50 oil meeting API rating SN or SP (Indmar 872007)


### **NOTICE**

*The use of engine oil other than the recommended viscosity with an API SN or SP designation can cause engine damage. Damage to your engine caused by the use of improper oils is not covered by your warranty.*

### **Changing Oil**

**CAUTION! Engine oil may be hot.** Change your engine oil after the first 10-20 hours of operation. Then change oil every 75 hours (25 in severe conditions; 50 hours for 575) or annually, whichever comes first. To maximize engine life, change the oil filter at every oil change.

**NOTE:** *Oil change intervals may need to be decreased based on severity of service. Your boat may be equipped with a monitor to notify the operator when an oil change is due.*

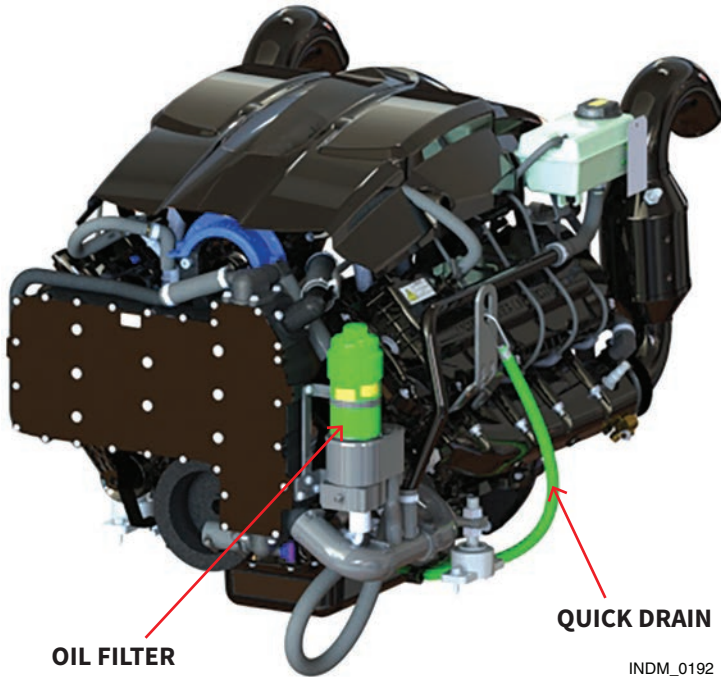

INDM\_0192

**FIGURE 7.4 | OIL FILTER AND DRAIN**

Indmar recommends all engine maintenance procedures be performed by your dealer, including oil changes. If you must perform the oil change yourself, operate the engine to full operating temperature.

1. With the boat level on trailer, remove the hull or garboard drain plug and insert QuickDrain through the hull opening (outside of hull).
2. Remove QuickDrain hose cap and let oil flow into used oil container. When all oil has drained, replace cap and return QuickDrain to storage position.
3. Replace the hull or garboard drain plug.
4. For Engines with Cartridge Style Filter: Remove the oil filter cap from the canister assembly and wipe clean. Carefully remove and discard the O-ring from the cap and the oil filter cartridge.

5. For Engines with Cartridge Style Filter: Insert a new 501022S oil filter cartridge into the canister assembly. Install and lubricate the new filter cap O-ring, replace the oil filter cap on the canister and tighten to the specification indicated on the cap.
6. Add the new oil through the cap located on the engine valve cover. Fill only to the FULL mark of dipstick.
7. After initial start up, always carefully inspect oil drain plug and oil filter gasket area for leaks.
8. Stop the engine and re-check oil level. Add if necessary.

### **Oil Additives**


Do not use oil additives. Indmar engines do not need oil additives. Use of recommended oil, along with regular oil and oil filter changes, will protect your engine adequately.

### **Disposing**

Used engine oil contains dangerous chemicals and is considered a hazardous waste. Do not allow used oil to remain on your skin for any length of time. Make certain to drain all free flowing oil from the filter prior to disposal. Recycle used oil by taking it to a collection center. If you have a problem disposing of used oil, ask your Indmar dealer or service station for the name of a local oil recycling center for proper disposal.

**ENGINE FLAME ARRESTOR**

Your engine is equipped with a U.S. Coast Guard approved flame arrestor. Its purpose is to contain any backfire that may occur during the operation of your engine. Because an inboard engine is completely enclosed, an uncontained backfire can be extremely dangerous.

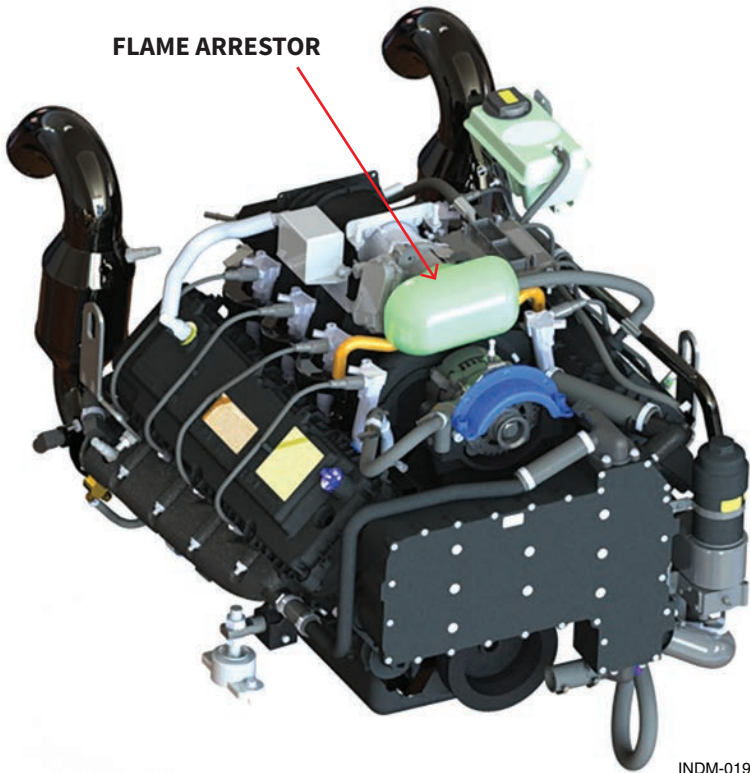

INDM-0193

**FIGURE 7.5 | FLAME ARRESTOR**

Periodically inspect flame arrestor to prevent clogging by dirt or corrosion.

**High-Performance Element-Type Flame Arrestor**

Your engine is equipped with a high-performance USCG-approved element-type flame arrestor; special procedures are required. Consult your dealer for special servicing instructions for this flame arrestor or go to <https://www.knfilters.com/cleaning>.

 **WARNING**

**Do not remove the flame arrestor at any time when the engine is being started or run as it may result in fire and explosion.**

**ENGINE COOLING** **WARNING**

**Running engine without adequate cooling can cause engine to overheat and may result in fire, explosion.**

**NOTICE**

*Fresh water cooled engines are shipped from the Indmar factory filled with a 50/50 mix of Indmar propylene glycol anti-freeze and water. Indmar propylene glycol antifreeze is not compatible with other types of antifreeze. This mixture provides freeze protection down to -26°F (-32°C). If the temperature in your area is expected to go below this level of protection, see your Indmar dealer to have the anti-freeze mixture adjusted for your needs. Engines shipped out of the United States may not be shipped with fluids.*

**NOTICE**

*Running your engine with your boat out of water will damage or ruin your engine. Damage to your engine caused by overheating is not covered by your warranty.*

Marine engines are cooled by the raw water outside of the boat. For this reason, do not start the engine when the boat is out of the water without an engine flushing device available from your Indmar dealer.

**NOTICE**

*Running the engine without the boat being in the water can cause damage to your engine and jet pump. Consult your jet pump owners manual for guidance and requirements.*

### Sea Strainer/Flushing Device

Your boat might be equipped with an Indmar Strainer Pro combination sea strainer/flushing device like the one below. If your boat is not equipped with a strainer, we suggest that you discuss the need for one with your dealer and have one installed.



FIGURE 7.6 | SEA STRAINER/FLUSHING DEVICE

#### **⚠ WARNING**

**Do not remove the cover of the Strainer Pro to remove debris while the boat is in the water unless the raw water inlet is equipped with a shutoff valve (sea cock) and that valve is in the OFF position to prevent water entering and possibly sinking the boat.**

#### **NOTICE**

*Do not run the engine out of the water using a flushing device or external water supply.*

It is critical to check the strainer daily to make sure it is free of weeds and other debris. If the body of water has lots of aquatic vegetation, check the strainer more often.

### **Maintenance**

The Strainer Pro is designed to prevent weeds and other debris that enters the cooling system from penetrating the engine and restricting water flow. Check the strainer basket regularly for debris and clean as necessary.

1. If there is debris in the Strainer Pro and the boat is in the water, **DO NOT** disassemble the Strainer Pro before you place the sea cock in the OFF or CLOSED position. If there is no sea cock, remove the boat from the water before disassembling the Strainer Pro.
2. Remove the inlet cap retainer by rotating it in a counterclockwise direction.
3. Pull the inlet cap from the sea strainer.
4. Remove the wire mesh screen from the sea strainer and remove the debris from the screen.
5. Reinstall the wire mesh screen in the sea strainer.
6. Reinstall the inlet cap, making sure to not damage the sealing O-ring.
7. Reinstall the inlet cap retainer and rotate it clockwise to tighten. Hand tight is sufficient.

### **Flushing the Engine**

An added feature of the Indmar Strainer Pro is the built-in flushing connection. To flush your engine with fresh water:

1. The boat **MUST** be equipped with a water inlet shut-off valve between the jet pump and the Indmar Strainer Pro to be able to flush the engine.
2. Remove the flushing protection plug from the sea strainer.
3. Attach a standard water hose to the flush fitting on the sea strainer.
4. Turn on the water supply to the hose between 1/4 and 1/2 pressure.
5. Let water flow through the engine for 10-15 minutes. Do not start the engine if the boat is out of the water. Engine may be started if boat is in the water and jet pump is submerged.

6. Turn water supply off.
7. Remove water supply hose from sea strainer and replace the flush protection plug.
8. Open shutoff valve or seacock before operation.

### Fresh Water (Closed) Cooling Systems

**⚠ WARNING**

**Avoid possible skin burns, turn the engine “OFF” and allow it to cool enough so no heat is registered on the temperature gauge. Only after the engine is completely cooled is it safe for you to remove the coolant reservoir cap to check the level.**

All Indmar engines covered in this manual have a closed fresh water cooling system. In the fresh water system the cooling water contains anti-freeze and re-circulates throughout the engine. If your engine is equipped with a heat exchanger tank, it has a fresh water cooling system. Raw water is pulled through the intake and flows through chambers in the heat exchanger and then discharged overboard with the engine exhaust.



INDM-0176

#### FIGURE 7.7 | HIGH FILL TANK

Check coolant level daily. The level in the high fill tank should be maintained at the “MIN” mark (1, Figure 7.7) when the engine is cold.



**NOTICE**

- *Failure to maintain the coolant at the proper level can cause engine damage. Your warranty will not cover engine damage due to overheating or any other cause associated with improper coolant levels.*
- *Use only Indmar propylene glycol coolant. Use of any other coolant or mixing coolant types can cause engine damage. Damage to your engine from use of any other type of coolant is not covered by warranty.*
- *The coolant system should be flushed and coolant replaced every two years. This should be performed by a qualified Indmar service technician.*

When adding coolant, add only a 50/50 mix of Indmar propylene glycol coolant (P/N 872027) and distilled water in accordance with the directions on the container. Do not overfill the tank. Do not mix anti-freeze types. Do not use concentrations that exceed manufacturer's specifications.

Adding ethylene glycol coolant to the propylene glycol will result in a chemical reaction that disables the cooling system and the engine must NOT be run. A chemical flush by a dealer will be required to put the engine back in service.

If the cooling system is completely empty, see your Indmar dealer for assistance immediately to purge system. Purging the system is a difficult procedure that is not recommended for the boat owner.

**Salt and Hard Water Operation**

All Indmar Marine engines are capable of operating in brackish or salt water as well as in hard water or water with high mineral content as long as certain precautions and maintenance procedures are followed. Your dealer will be aware if the local freshwater lakes in your area will require any special precautions to keep your engine functioning properly. Damage to the engine, both internal and external, that is a result of inadequate salt or hard water maintenance will not be covered under the Indmar Limited Warranty.

### External Care

Your engine has been carefully primed and painted to protect it against rust and corrosion. To keep your engine looking like new, Indmar recommends applying an anti-corrosion compound. Regular application (every 3 months) of this protectant, particularly on exposed metal surfaces, motor mounts and electrical connections, will displace water and seal the surfaces against penetration by corrosive agents. Rinsing the engine with fresh water between applications of the protectant will further protect the exposed surfaces.

## INTERNAL (COOLING SYSTEM) CARE

### Fresh Water Cooling – Half-Systems

A fresh water cooling system that uses anti-freeze in the engine but raw water in the exhaust manifolds is referred to as a half-system. Although the engine is protected, it is still important to flush the engine with fresh water to remove as much salt water as possible from the raw water side of the cooling system as well as from the exhaust manifolds and risers. For more convenient flushing, ask your dealer about permanently installing a flushing device that allows easy connection of a water hose.

## FRESH WATER COOLING

All fresh water cooling systems must be inspected and maintained annually, usually during winterization.

## FUEL SYSTEM

**Gasoline is extremely flammable and highly explosive under certain conditions.** The fuel system consists of fuel lines, fuel filter, fuel pump, and an unused fuel recovery system. Fuel in the system is under pressure and must be relieved before servicing. Because of the inherent danger of fuel leakage into the bilge, do not attempt servicing or maintaining components of the fuel system.

Your Indmar dealer has factory trained technicians and U.S. Coast Guard approved marine grade parts required for fuel systems.


Your Indmar engine may be equipped with a spin-on type water-separating fuel filter that needs to be replaced every 50 hours or annually, whichever occurs first.

**! WARNING**

**The fuel filter is under pressure. The pressure must be relieved before removing the filter.**

**Removal Procedure (Safety Glasses Required)**

1. Disconnect the negative cable from the battery or place the battery switch in the OFF position. If the boat has more than one battery, disconnect all of the negative cables.
2. Remove the cap from the Schrader valve at the top of the filter head.
3. Use a fuel system pressure tester which will capture the fuel and allow it to be drained into a suitable container.
4. Use an appropriate filter removal tool or strap wrench to turn the filter as shown to loosen.
5. Carefully remove the filter; it will be full of fuel. Place the filter in an appropriate container that will catch any spilled fuel. If the old filter seal is still attached to the filter head, remove it.

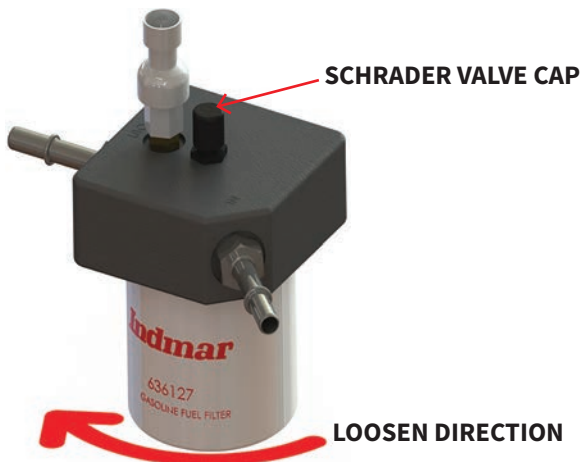

INDM-0177


**FIGURE 7.8 | FUEL FILTER**

### Reinstallation Procedure

1. Apply a light film of oil to the filter seal.
2. Make sure the filter head is clean. Install a new 636127 filter and turn it by hand till the seal contacts the filter head.
3. Tighten the filter an additional 3/4 turn by hand.
4. Reconnect the negative battery cable(s) or turn the battery switch ON.
5. Run blower for a minimum of four minutes and check bilge for gasoline fumes before attempting to start the engine.
6. Engine may be difficult to start initially and run roughly until all air is purged from the fuel system.
7. Replace the cap on the Schrader valve.
8. Cycle the keyswitch on one more time and check carefully around the fuel filter for leaks. Tighten as necessary.
9. Start the engine and check for leaks. If the engine will not be started at this time put a tag on the ignition switch or steering wheel to check fuel system for leaks upon start-up.

### ELECTRICAL SYSTEM

The electrical system on all Indmar engines is protected by a 40A main circuit fuse. If the engine will not crank with the battery switch in the ON position, locate the fuse in the electrical box on the engine. Remove the cover from the electrical box and check the 40A fuse. If the fuse is blown, there is a spare in the electrical box. There are also other spare fuse locations in the electrical box. Always keep spare fuses in these locations. If you use the 40A fuse, obtain another from your dealer or from an automobile parts store, and replace the spare fuse in the electrical box cover. If the system continues to blow fuses, take the boat to your dealer and have the electrical system checked.

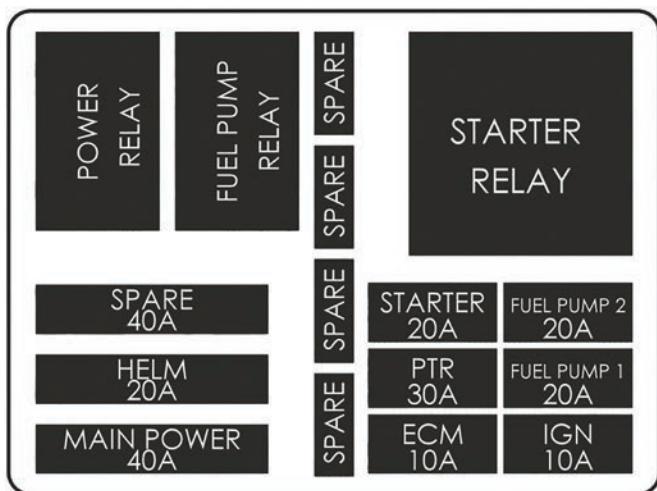

INDM\_0168

**FIGURE 7.9 | FUSE BOX LAYOUT**

Fuses are located on top of the engine near the intake. To remove or inspect a fuse, remove molded plastic cap from fuse holder. Inspect fuse and replace if it is defective. **Make sure to replace the fuse block cover when finished for the fuse block to be ignition protected.**

## WIRING

If during maintenance or inspection, it becomes necessary to move or reposition any of the engine's wiring or wire harnesses, verify that wiring is returned to its original position, and that all harnesses are routed correctly. If a wiring clip or retainer breaks, replace it immediately. Wiring is specifically routed to eliminate problems related to engine heat and spray, immersion in liquids, or contact with rotating assemblies. Electrical problems can result if wiring is moved from its original position and is not properly repositioned.

**NOTE:** *If you add high current accessories such as thrusters or stereo systems, see your dealer for an Indmar High Output Alternator kit.*

### Charging System Maintenance / Guidelines

Adhering to the following procedures and guidelines will ensure proper operation of your battery charging system. Watch out for:

- 1. REVERSE BATTERY POLARITY:** When reconnecting the battery after winter storage, it is easy to accidentally reverse the battery leads and connect positive to negative and negative to positive. This generally results in a large arc at the battery terminals and failure of the diodes and/or regulator in the alternator as well as other components in the electrical system of the engine or boat that are polarity sensitive such as ignition modules, ECMs, stereos, etc. For several components to fail at the same time, the failures are generally due to some external influence such as reversed battery leads or reversed jumper leads. These types of failures are not covered by Indmar's Limited Warranty.
- 2. POOR CONNECTIONS:** When there is a defective connection between the battery and alternator, charging current will be forced to find an alternate route to flow out toward the battery. A defective connection may be caused by corrosion or an open circuit from a break in several battery cable strands or simply a loose connection. The alternate route that current finds usually leads to excessive current flow, causing the diodes in the alternator to overheat and fail. It is critical that all electrical connections are clean and tight. These types of failures are not covered by Indmar's Limited Warranty.
- 3. POSITIVE CIRCUIT FAULTS:** A bad connection or open circuit between the alternator output terminal and the positive battery terminal will force the charging current to follow a parallel route through the diode trio and out of the alternator. This heavier than normal current flows through the diodes and will cause them to overheat and fail. Consequently, if you have replaced an alternator because of bad diodes, and the replacement fails for the same reason, there is likely a bad connection between the alternator BAT (B+) terminal and the positive side of the battery circuit. Have your dealer do a voltage drop test to check the entire circuit. Also, never remove a battery cable when the engine is running. This will cause the diodes to overheat and

- fail. Never use the alternator to bring an undercharged battery to a fully charged condition. The excessive current draw can overheat the diodes and cause them to fail. These types of failures are not covered by Indmar's Limited Warranty.
4. **NEGATIVE (GROUND) CIRCUIT FAULTS:** The primary mount of the alternator serves as the negative ground for the alternator. This connects the alternator to the engine block which is in turn connected to the negative post of the battery via a ground stud on the engine. The ground stud on the engine holds all of the wiring harness grounds and battery ground with one nut and it is known to occasionally become loose, disconnected or corroded. When the alternator loses its ground, it can become damaged as it surges and could cause catastrophic damage to the voltage regulator within the alternator. It is important to keep the ground wires, stud and nut clean and tight and check it often. These types of failures are not covered by Indmar's Limited Warranty.
  5. **OVERLOADED:** Never use the alternator to bring a dead or undercharged battery to a fully charged condition. The excessive current draw can overheat the diodes and cause them to fail. If you have a dead battery, use a battery charger instead. If you experience a battery that is constantly being discharged, look for the cause, such as bad battery or aftermarket accessories, or defective electrically operated accessories. Find the cause of the discharge before permanent damage is done. These types of failures are not covered by Indmar's Limited Warranty.

## **GENERAL LUBRICATION**

### **Starter**


Your starter has been sprayed with lubrication internally to extend its longevity. Corrosion, rust and water intrusion will not be covered under Indmar's Limited Warranty.

## Shift and Throttle Cables

Spray exposed throttle cable and shift cable ends with a corrosion protectant and lubricant. Check boat owner’s manual for recommendations. Work the cable back and forth, and then spray to completely lubricate. In highly corrosive locations, a complete cable lubrication system may be purchased through your Indmar dealer.

## ACCESSORY DRIVE


The serpentine drive belt on your engine drives the coolant circulation pumps and the alternator. Tension is automatically applied to the belt by a spring loaded tensioner so there are no adjustments required. The belt should be checked periodically for damage or wear. Figures 7.9 and 7.10 show the correct routing of the belt in the event that it needs to be replaced.

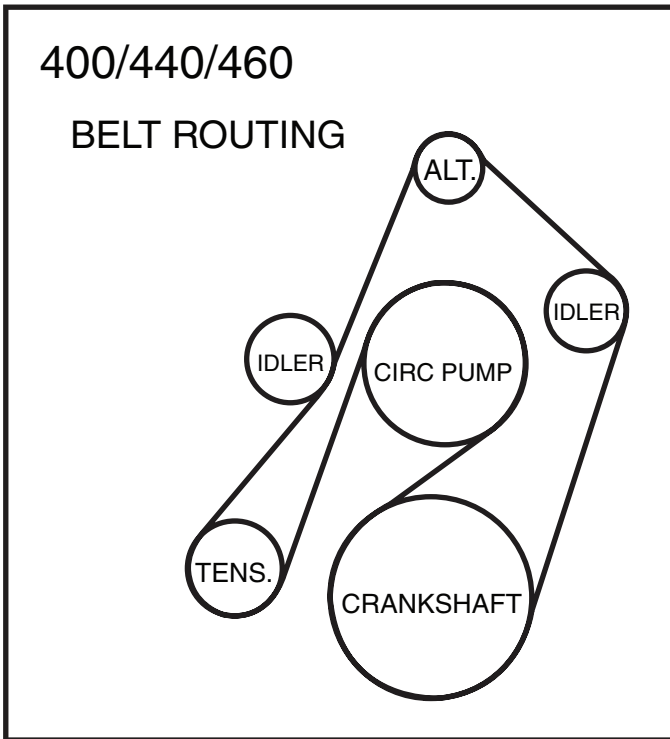

INDM-0086a

FIGURE 7.10 | SERPENTINE BELT ROUTING – SUPERCHARGED MODELS



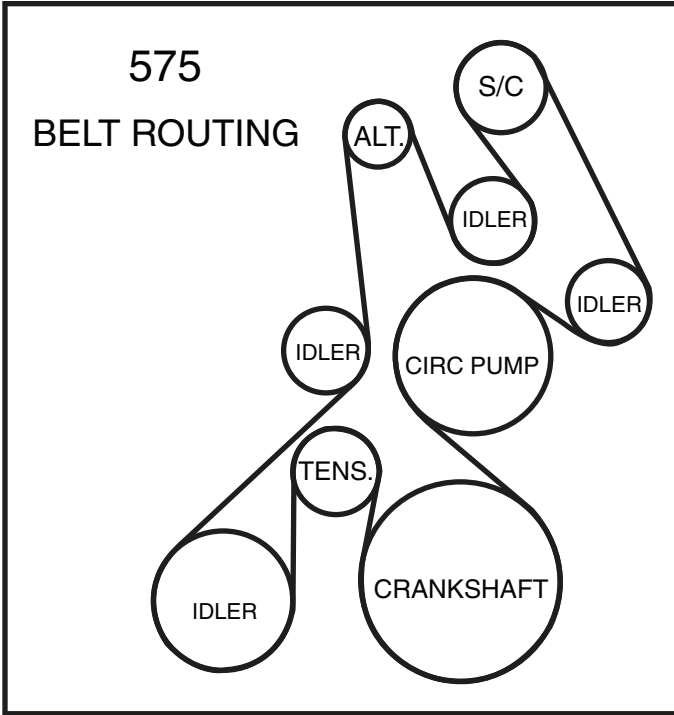

INDM-0087

**FIGURE 7.11 | SERPENTINE BELT ROUTING –  
NATURALLY ASPIRATED ENGINES**

**NOTES**

# Section Eight

## STORAGE AND WINTER LAY-UP

Before operating or maintaining the engine, review “Safety” on page 1-1.

Storage or winter lay-up requires preparation to prevent damage to the power package. While preparing the power package for winter lay-up, annual maintenance tasks should also be performed.

Without proper preparation, storage over a long period of time may cause internal engine parts to rust due to lack of lubrication. Also, if the boat is stored where the temperature falls below freezing, any water not drained from the engine may freeze, resulting in severe damage. Damage that is the result of improper storage is not covered under terms of Indmar’s Limited Warranty.

### **NOTICE**

*Because of the complexity of preparing your engine for winter storage, and the danger of catastrophic engine damage from freezing water in the engine, it is recommended that you have your dealer perform winterization procedures. Damage due to improper winterization/storage is not covered by product warranty!*

To properly winterize your engine, you **MUST** be able to bring the engine up to operating temperature. To accomplish this, your boat must be in the water. Damage to the jet pump will occur if the boat is not in the water. Consult the jet manufacturers manual for guidance.

### **NOTICE**

*This procedure covers only the engine package portion of your boat. Consult your boat owner’s manual or boat manufacturer for specific boat winterizing instructions.*

### GENERAL PREPARATION

Before beginning you will need the following supplies:

- STA-BIL 360 Marine Fuel Treatment & Additive
- 8 quarts of Appropriate Engine Oil
- Indmar Oil Filter (P/N 501022S)
- 1 can Corrosion Protectant and Lubricant
- Indmar Marine Waterproof Grease
- Pipe Thread Sealant
- Anti-Freeze Tester suitable for Propylene Glycol
- Indmar Propylene Glycol Anti-Freeze (As required)

## Fuel System Treatment

 **WARNING**

**Running the engine with the flame arrestor removed increases the possibility of fire or explosion if engine backfire occurs and gasoline fumes are present. If the engine is operated without the flame arrestor secured, extreme care must be taken to ensure that the engine compartment is well ventilated and that no fuel leaks are present.**

1. For winter storage, fill the fuel tank(s) with fresh fuel and a sufficient amount of STA-BIL 360 Marine Fuel Treatment & Additive to treat the entire tank. Follow instructions on the container.
2. With the boat in the water, start the engine and operate at Idle RPM until the engine reaches normal operating temperature. Run the engine for at least 15 minutes to ensure that the fuel stabilizer enters the engine's fuel system.

### **NOTICE**

*Indmar does not approve the use of any type of fogging oil or lubrication of cylinders. Introducing fogging oil can damage catalytic converters and O2 sensors. Such damage is not covered under the Indmar Limited Warranty.*


3. Perform annual maintenance; refer to Section 7, Scheduled Maintenance Chart.

### Seawater Cooling System Preparation

Your Indmar engine is equipped with a cooling system that uses a 50/50 Indmar propylene glycol anti-freeze and water mixture in the engine block and raw water in the heat exchanger and exhaust system. If the boat is kept in an area where the temperature falls below the freezing point of water (32°F or 0°C), the cooling system must be winterized to prevent freeze damage to the engine. Do not leave the boat in the water during freezing conditions.

To winterize the raw water cooling system the blue drain plug must be removed from the bottom of the heat exchanger to drain the raw water.

The protection level of the anti-freeze must be tested using a refractometer type anti-freeze tester that is designed to test propylene glycol anti-freeze. These testers are available at automobile parts stores and can also be found on many websites that sell automotive related tools and equipment. Follow the instructions that come with the tester and make sure the anti-freeze in the engine will protect to lower than the lowest temperature that your part of the world experiences.

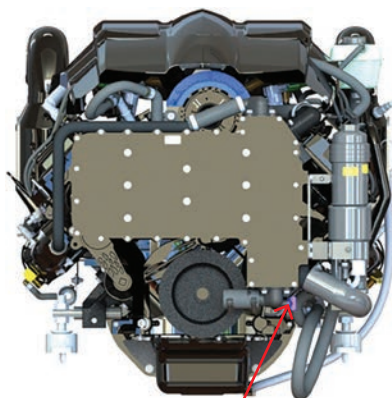

**REMOVE BLUE DRAIN  
PLUG FROM BOTTOM  
OF HEAT EXCHANGER**



**REMOVE BLUE DRAIN  
PLUG FROM BOTTOM  
OF HEAT EXCHANGER**

INDM-0194

## FIGURE 8.1 | RAW WATER COOLING SYSTEM

### General Power Package Preparation

1. Clean dirt, grime and grease from painted surfaces of the engine and drive train.
2. Touch up painted areas of the engine.
3. Coat unpainted components (engine mounts, e.g.) with Indmar Marine Waterproof Grease.

# REACTIVATING ENGINE AFTER EXTENDED STORAGE

### NOTICE

*Use caution when connecting the battery cables. Improperly connecting the battery cables or using the wrong battery type can damage electrical components. These damages are not covered by your warranty.*

1. Charge and reinstall the battery in the boat. Make sure the terminals are clean and tight.
2. Confirm blue drain plug(s) have been installed in the correct location(s).
3. Inspect the accessory drive belt and make sure that it is routed properly.
4. If the fuel tank was drained, fill the tank with fresh fuel that does not contain ethanol.
5. Check all fluid, oil, and coolant levels on the engine and drive train.
6. Check the engine compartment and bilge for nesting animals. Clean as necessary. Check for any damage or evidence of fluid leaks.

**NOTE:** *With the boat in the water, cycle the key switch ON, then OFF, for five second intervals 3-4 times before cranking the engine to allow the fuel pump to prime the fuel lines.*

7. Review boat manufacturer's starting procedure.
8. Start the engine. If you experience a no-start condition, do not crank the engine for more than 15 seconds without allowing a two minute cool-down period. When the engine starts, keep a close watch on the gauge readings. Check all of the hoses and drain plugs for leaks. Listen for abnormal noises. Run the engine long enough to reach normal operating temperature and reinspect for leaks. If no leaks are found, the boat is ready for operation.



## **EXTENDED STORAGE**

If you must store your boat for an extended period of time (more than normal off-season storage), additional procedures are required. The procedures for preparing for extended storage and recommissioning after extended storage are best accomplished by an authorized Indmar dealer.

Follow the normal procedures for off-season storage.

## **Recommissioning**

1. Follow the normal procedures for recommissioning after off-season storage.
2. Remove and clean the fuel injectors and flush the entire fuel system.
3. Install a new fuel filter.
4. Change all of the engine fluids and lubricants. Install a new oil filter.
5. Check all belts and hoses for cracks and wear. Replace as needed.
6. Install new spark plugs. Check the wires for cracks and damage.
7. Charge the battery and check battery connections to make sure they are clean and tight.
8. Put fresh gasoline in the fuel tank that does not contain ethanol. Cycle the key switch several times to make sure the fuel system is full and primed. Install an appropriate tester and verify the fuel pressure is at specification.
9. With the boat in the water, start the engine. While the engine is warming up, check for leaks and smooth engine operation. Monitor the fuel pressure to make sure it stays in specification.
10. With the boat in the water, operate it at various RPM. Monitor the engine temperature, oil pressure, charging voltage and fuel pressure to make sure all stay within specification. Check the various engine operating parameters with a diagnostic scan tool to make sure all parameters are within specification.

**NOTES**

# Section Nine

## TROUBLESHOOTING

Before operating or maintaining the engine, review “Safety” on page 1-1.

Your Indmar engine is manufactured under strict quality control standards. It is tested along with a full spectrum gas analysis. It is operating at optimum levels before it is shipped.

Difficulties can occur. Use the following problem diagnosis charts to help pinpoint problems. In most cases, you will need the assistance of your Indmar dealer to correct the cause of the problem.

**NOTE:** *Modern boats are equipped with an onboard diagnostic system that displays a check engine indication and informs the operator of specific drive train faults.*

### Poor Gas Mileage

- Fouled spark plugs
- Plugged flame arrestor
- Poor driving habits
- Plugged positive crankcase ventilation system
- Black smoke at exhaust outlet shows rich gas mixture
- Excessive boat loads (weight)
- Damaged or dirty hull
- High altitude adjustment required
- Adjustment for temperature extremes required

### Hard Cold Start

- Weak or discharged battery
- Loose coil or ignition wires
- Engine flooded
- Fouled spark plugs

- Lack of fuel
- Battery cables loose or corroded
- Loose electrical grounds at engine
- Ignition switch problems
- Dirt or water in fuel system
- Engine needs tune-up

### **Poor High Speed Performance**

- Fouled spark plugs, incorrect spark plug gap or heat range
- Dirt or water in fuel
- Lack of fuel
- Restricted exhaust system
- Plugged flame arrestor
- Insufficient air supply to engine
- Engine needs tune-up

### **Engine Cranks / Won't Start**

- Weak or shorted coil; no spark at plugs
- Loose engine grounds
- Lack of fuel
- Weak or discharged battery
- Boat Engine Safety switch not attached
- Vapor lock

### **Idle – Misses or Runs Rough**

- Spark plugs fouled or cracked
- Spark plug wires loose or shorted
- Plugged positive crankcase ventilation system
- Engine in need of tune-up

## **Hard Start Hot**

- Flooding condition
- Loose electrical ground at engine
- Plugged flame arrestor
- Fouled spark plugs
- Loose coil or ignition wires
- Battery cables loose or corroded
- Weak or discharged battery

## **Engine Won't Crank**

- Weak or discharged battery; loose or corroded battery cables
- Defective neutral safety switch or adjustment needed
- Defective starter motor
- Ignition switch problems
- Hydrostatic lockup – remove spark plugs to look for water or gasoline in cylinders
- Seized engine – turn crank pulley with socket and ratchet

**NOTES**

# Appendix – A

## MAINTENANCE COMPONENTS AND FLUIDS

Engine Oil	400, 440 Models: Semi-synthetic 5W-30 oil meeting API rating SN or SP, P/N 872003 460 and 575 Models: Fully synthetic 15W-50 oil meeting API rating SN or SP, P/N 872007
Engine Oil Filter (Cartridge and O-ring)	P/N 501022S
Engine Coolant (for fresh water cooled systems)	50/50 mix Indmar propylene glycol and distilled water, P/N 872027
Flame Arrestor	575 Models, P/N 525900 460 Models, P/N 525902-1 400, 440 Models, P/N 525900-1
Engine Fuel (for storage)	Marine formula fuel stabilizer
Fuel Filter (In-line style)	P/N 556003
Fuel Filter (Spin-on style)	P/N 636127
Engine Cables (for corrosion protection)	Corrosion protectant and lubricant
Alternator Belt (Premium Models) 95 and 170 Amp Alternator	P/N 725903
Alternator Belt (Supercharged Models) 95 and 170 Amp Alternator	P/N 725902
Alternator Belt (400-440 Models) 250 Amp Alternator	P/N 725903
Alternator Belt (460 Models) 250 Amp Alternator	P/N 725903

# APPENDIX – A

---



---

Alternator Belt (SC 575 Models) 250 Amp Alternator	P/N 725905
Thermostat	P/N 985901
Spark Plugs	400, 440 and 460 - P/N 597037-16 575 - P/N 597128-16 Torque: 17.7 lb-ft (24 N·m)
Surface Corrosion Protection	Corrosion protectant and lubricant

---





**NOTES**

# Appendix – B

## ENGINE SPECIFICATIONS

Number of Cylinders	8
Displacement	376 cid (6.2 L)
Bore	4.015" (102 mm)
Stroke	3.74" (95 mm)
Compression Ratio	9.8:1
Compression Pressure	Minimum 100 psi (690 kPa)
Idle RPM in Neutral	650 RPM
Operating Range at WOT	5000-5400 RPM
Minimum Oil Pressure at Idle	8 psi (55 kPa)
Oil Filter	P/N 501022S (cartridge)
Fuel Pump Pressure	60 psi (414 kPa)
Electrical System	12V DC Negative (-) Ground
Minimum Battery Requirements	800 CCA/1000 MCA
Firing Order	1-5-4-8-6-3-7-2
Spark Plug Type (16 Plugs Required) 400, 440, and 460 models	597037-16
Spark Plug Type (16 Plugs Required) Supercharged 575 Models	597128-16 Torque: 17.7 lb-ft (24 N·m)
Spark Plug Gap 400, 440, and 460 Models	0.044" (1.12 mm)
Spark Plug Gap Supercharged 575 Models	0.031" (0.8 mm)
Thermostat	160°F (71°C)

<b>Maximum RPM</b>			
400	440	460	575
5400	5500	5600	5400

<b>Fluid Capacities</b>	
Engine Oil*	8 qt (7.6 L)
Closed Cooling System	12-14 qt (11.4-13.3 L)

\* Always fill to full mark on dipstick. Do not overfill.

# Appendix – C

## INDMAR LIMITED PRODUCT WARRANTY

### Ford-Based Engines

1. **Warranty.** Indmar Products Co., Inc., 5400 Old Millington Road, Millington, Tennessee 38053 (“Indmar”), warrants that its marine propulsion engine and the parts related thereto (collectively, “Product”) are free from material defects in material and workmanship under normal use and service during the applicable warranty period as set forth herein.
2. **Coverage.** Indmar shall replace or repair any defect in material or workmanship relating to the Product under the terms and conditions of this Limited Product Warranty. Normal wear and maintenance items such as impellers, filters, anodes and spark plugs are excluded from the Indmar Limited Product Warranty unless replacement is required due to a defect in material or workmanship or are specifically covered under the emissions warranty statement. If a Product or defective part thereof is, upon examination by Indmar, determined by Indmar to be defective, Indmar shall repair, or at its sole option, provide either a new or rebuilt replacement of equivalent quality. Indmar shall have the sole discretion to determine whether the replacement, if provided, shall be a new or rebuilt replacement. Indmar’s sole obligation under this Limited Product Warranty is limited only to the foregoing obligations as stated herein.
3. **Customer.** This Limited Product Warranty is extended only to the original retail purchaser of a boat or the original lessor, in the case of a leased boat, in which a Product has been installed pursuant to Indmar’s approval or authority (“Customer”). In the event that the product is used in conjunction with a demonstrator or boat show display, the warranty begins from the earlier of the date of delivery to the retail purchaser or such time as the boat installed with the Indmar product attains more than 50 hours of use regardless of the source of such use (Does not apply in the state of California). If the boat is sold or traded prior to the end of the applicable warranty period set forth herein, the remainder of the applicable warranty period is transferable to the new owner or

new lessor (also referred herein as “Customer”) provided that all of the requirements for a valid transfer as set forth in this Limited Product Warranty are satisfied. No transfer of any rights by any Customer shall be deemed valid or effective unless and until approved in writing by Indmar. Warranties of any nature to any person other than those described herein are specifically excluded.

4. **Excluded Items.** In addition to, and without in any way limiting, any exclusion set forth elsewhere in this Limited Product Warranty, this Limited Product Warranty shall not apply to the following items:

- (a) Shop supplies used in performing work pursuant to this Limited Product Warranty, including, but not limited to, rags, sealants and lubricants.
- (b) Incidental and consequential damages, including, but not limited to, storage charges, telephone or rental charges of any type, inconvenience or loss of time or income.
- (c) Loose nuts, bolts, clamps or other Indmar-installed fasteners after 100 hours of operation or 12 months, whichever comes first.
- (d) Minor adjustments and tune-ups, including, but not limited to, checking, cleaning or adjusting spark plugs, filters, belts, controls and checking lubrication.
- (e) Water pump impellers, water hoses, cooling system anodes, or any component determined solely by Indmar to be damaged due to normal wear, lack of maintenance or abuse such as operating without cooling water or ingesting debris.
- (f) Product failure as determined solely by Indmar to be caused by neglect, lack of maintenance, accident, abnormal operation, improper installation, improper preparation, improper winterization, improper dealer set-up, improper service or normal wear and tear.
- (g) Haul-out, launch, and towing charges.
- (h) Cost and expense incurred that relate to the removal and/or replacement of boat partitions, seating, or material due to boat design for necessary access to the Product.
- (i) Transportation charges and travel time incurred by dealer to fulfill any of its obligations pursuant to this Limited Product Warranty.
- (j) Service or work to the Product as requested by the Customer that is as determined solely by Indmar to be beyond the scope of this Limited Product Warranty.

- (k) Use of parts other than Indmar parts (or parts authorized by Indmar) and the use of labor other than Indmar labor (or labor authorized by Indmar) when making repairs or providing a replacement under this Limited Product Warranty.
- (l) Oil, lubricants or fluids used for the normal maintenance of the Product.
- (m) Defects to the Product as determined solely by Indmar to be caused by or due to participation in or preparing for racing or other competitive activity.
- (n) Defects to the starter motor, armatures or field coil assembly of the Product as determined solely by Indmar to be caused by excessive cranking, condensation or submersion.
- (o) Defects to the Product as determined solely by Indmar to be caused by water entering the Product via the intake or exhaust system or submersion or exposure.
- (p) Defects to the Product as determined solely by Indmar to be caused by the use of fuels and lubricants that are not suitable for use with or on the Product or its fuel system components that was damaged or rendered inoperable from stale gasoline.
- (q) Defects to the Product as determined solely by Indmar to be caused by the lack of cooling water resulting from the motor being started out of water or foreign materials blocking intake passages.
- (r) Defects to the Product as determined solely by Indmar to be caused by servicing errors made by the Customer or by any servicing dealer/mechanic not approved or authorized by Indmar.
- (s) Product warranty claims that Indmar in its sole opinion determines are not due or traceable to material defects in material or workmanship of the Product.

5. **Inspection and Testing of Product.** Certain parts of the Product may be tested upon receipt by Indmar. Such parts found to be free of defects will be returned to the dealer and no credit will be issued. Indmar reserves the right to retrieve run time/run condition data from a Product's Electric Control Module prior to granting any warranty coverage on the Product under this Limited Product Warranty.

6. **Warranty Period.** Visit [www.indmar.com](http://www.indmar.com) to view the full Indmar Marine Engines warranty statement.

7. **Procedure.** Within 10 days from the date of purchase by the original retail purchaser of the Product or the beginning date of lease period, the Selling Dealer shall register the Product online by visiting the **Indmar Dealer Portal, <http://dealers.indmar.com>**. In addition to other requirements set forth herein, no warranty claim will be honored without the successful online registration of the Product. In the case of a leased boat, a copy of the lease contract showing the length of the lease must be delivered to Indmar. In the case of a warranty transfer to a subsequent owner or lessor, the new owner/lessor's information along with the appropriate payment must be sent to Indmar by an authorized Indmar dealer within 10 days of the transfer. No transfer shall be effective or valid unless and until approved by Indmar in its sole discretion. In the case of a warranty transfer relating to a leased boat, a copy of the lease contract showing the length of the lease must also be submitted to Indmar by an authorized Indmar dealer along with the appropriate payment. For warranty claims to be asserted hereunder, the Product or defective part thereof, together with a written notice of itemized defects must be returned to the retailer from whom the Product was purchased or to any other convenient Indmar authorized dealer. To obtain the location of an authorized Indmar dealer or service center in your area, visit the dealer locator at **[www.indmar.com](http://www.indmar.com)**. In the event that the local authorized Indmar dealer is unable to remedy a warranted defect in the Product, the Product or defective part thereof, together with a written notice of itemized defects, must be delivered to Indmar at 5400 Old Millington Road, Millington, Tennessee 38053 with any and all freight and insurance charges prepaid. All insurance and freight charges and return charges incurred by Indmar for delivery of the Product (or its new or rebuilt replacement) to the retail purchaser or lessor shall be paid by such purchaser or lessor. The Customer shall be solely responsible for any and all labor expenses related to the repair or replacement of a Product pursuant to this Limited Product Warranty that exceed the specified services rates of Indmar in effect at the date of purchase or lease. A schedule of service rates of Indmar may be obtained from any authorized Indmar dealer.
8. **Trade Accessories.** Indmar makes no warranty of any character with respect to any and all trade accessories not manufactured by Indmar.



9. **Voiding the Warranty.** In addition to any requirement set forth in this Limited Product Warranty not being met or satisfied, this Limited Product Warranty shall become void and shall not apply under the following conditions or circumstances:

- (a) When the Product or any part thereof is subject to accident, alteration, modifications, abuse, misuse, neglect or improper maintenance and Indmar in its sole discretion determines the same;
- (b) When the Product is serviced by any individual or entity not authorized or approved by Indmar; or
- (c) When damage to the Product results from causes not arising from defects in material and/or workmanship and Indmar in its sole discretion determines the same.

10. **Notices.** Any notice to Indmar set forth pursuant to this Limited Product Warranty shall be delivered to the following address:

Indmar Products Co., Inc.  
5400 Old Millington Road  
Millington, Tennessee 38053

**THE WARRANTY STATED ABOVE IS A LIMITED WARRANTY AND IT IS THE ONLY WARRANTY MADE BY INDMAR. INDMAR DOES NOT MAKE ANY OTHER WARRANTIES EXPRESS OR IMPLIED. THERE ARE EXPRESSLY EXCLUDED ALL WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. INDMAR SHALL HAVE NO LIABILITY WITH RESPECT TO ITS OBLIGATIONS UNDER THIS LIMITED WARRANTY OR OTHERWISE FOR CONSEQUENTIAL, EXEMPLARY, INCIDENTAL OR PUNITIVE DAMAGES EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE STATED EXPRESS LIMITED WARRANTY IS IN LIEU OF ALL LIABILITIES OR OBLIGATIONS OF INDMAR FOR DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE DEVELOPMENT, DELIVERY, USE OR PERFORMANCE OF THE PRODUCT. IN ANY EVENT, THE LIABILITY OF INDMAR FOR ANY REASON AND UPON ANY CAUSE OF ACTION WHATSOEVER SHALL BE LIMITED TO THE AMOUNT THEN PREVIOUSLY PAID FOR THE PRODUCT BY THE CUSTOMER.**

**INDMAR DOES NOT AUTHORIZE ANY PERSON, EMPLOYEE, AGENT, REPRESENTATIVE OR ENTITY TO ALTER ANY OF THE TERMS AND CONDITIONS OF THIS LIMITED PRODUCT WARRANTY**

OR CREATE ANY OTHER OBLIGATION RELATING TO THE PRODUCT. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

**NOTICE TO CALIFORNIA CUSTOMERS: CALIFORNIA CUSTOMERS MUST DIRECTLY NOTIFY INDMAR IN WRITING IF THE PRODUCT DOES NOT CONFORM TO APPLICABLE WARRANTIES AND (A) THE NON-CONFORMITY IS LIKELY TO CAUSE DEATH OR SERIOUS BODILY INJURY AND HAS BEEN SUBJECT TO REPAIR TWO (2) OR MORE TIMES, AND/OR (B) THE NON-CONFORMITY HAS BEEN SUBJECT TO REPAIR FOUR (4) OR MORE TIMES. CALIFORNIA CUSTOMERS ARE HEREBY NOTIFIED TO THE FOLLOWING PROVISIONS OF CALIFORNIA LAW: CAL. CIVIL CODE § 1793.22 AND CAL. CIVIL CODE § 1793.2(d). COMPLETE COPIES OF THESE CODE SECTIONS ARE AVAILABLE UPON REQUEST.**

## **INTERNATIONAL WARRANTY EXCLUSIONS**

In addition to the limited warranty statement, the following limitations apply to products sold outside of the United States and Canada.

Indmar is not responsible for any Indmar Marine Engine Package:

- (a) Sold through an unauthorized dealer or OEM
- (b) Installed by an unauthorized dealer or OEM
- (c) Imported into the country by an individual or unauthorized OEM or dealer
- (d) That has not been properly serviced and maintained as stated in the Indmar Operator's Manual
- (e) Customs charges, import duties, taxes and VAT on warranty replacement parts

## **INTERNATIONAL WARRANTY PROCEDURES**

Indmar is excited to expand internationally with our boat builder partners and continually stands behind and supports its power packages that are sold outside the United States and Canada. To provide this support, Indmar Marine engines would like to ask international customers to help us provide the best quality customer service by adhering to all responsibilities that our North American owners comply with as outlined in this warranty. This, in addition to understanding the importance of service and maintenance through an authorized Indmar dealer or OEM, will help ensure that you the owner will receive the best quality workmanship and care of your new Indmar power package.

**NOTES**



